

JKWM Series – Instructions for Changing Posters



1. After the poster frame is mounted on wall, remove acrylic front panel from frame using the thumb slots on sides of lens. Place graphic behind acrylic lens panel.



2. Push one side of lens under lip in side channel of frame.



3. Flex and bow front panel with poster.



4. Slide front panel and poster under lip of opposite side channel.