

Assembly Instructions

DCFBS4S12S Children's 4 Sided Book Storage

For ages 3 and up. Adult assembly required.




 
 
⚠ WARNING


Small parts and sharp points may be present prior to assembly.

Care Instructions



To clean your product, use mild soap and water on a damp cloth. Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating.

Hardware and Parts

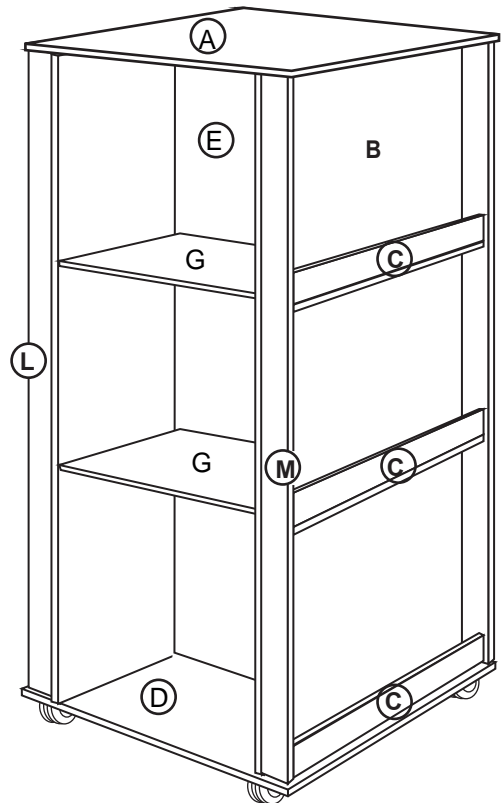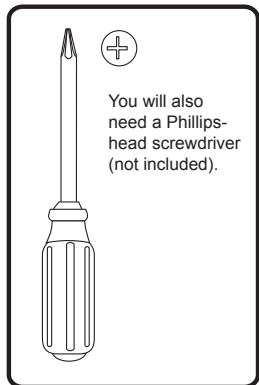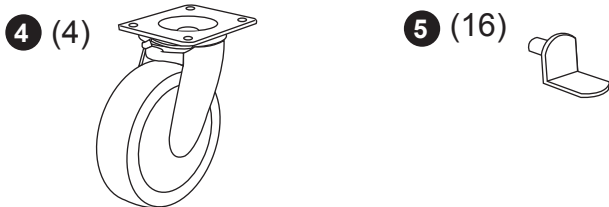


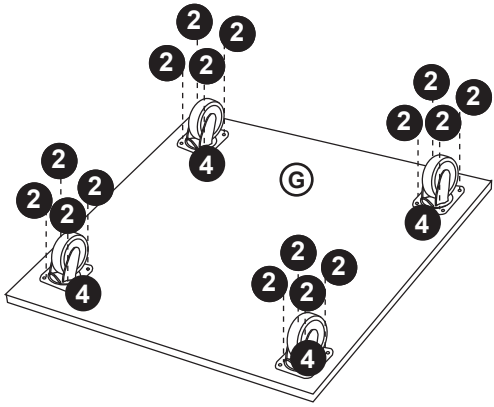


Step 1

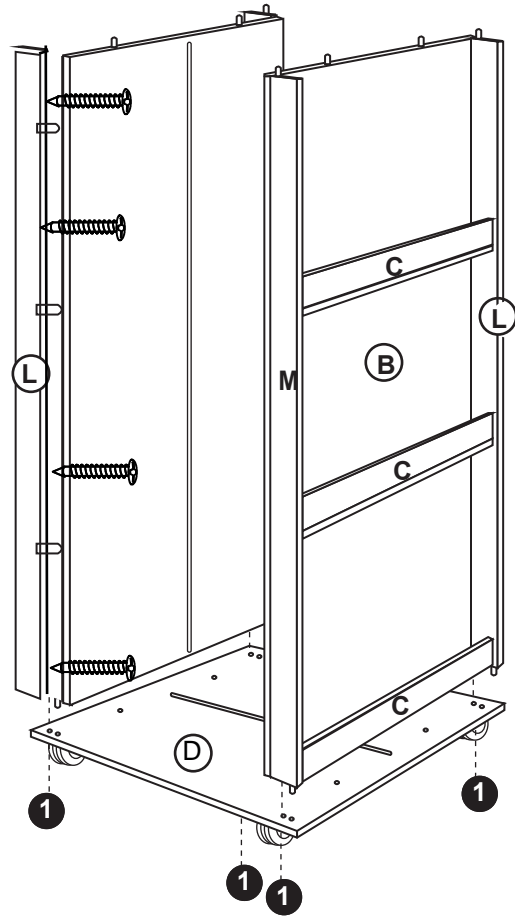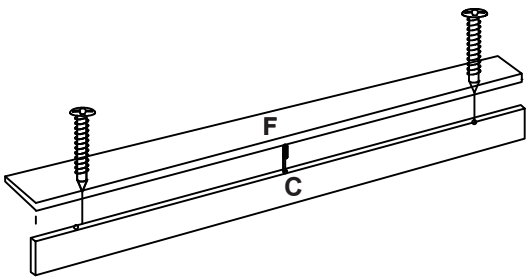

Step 2

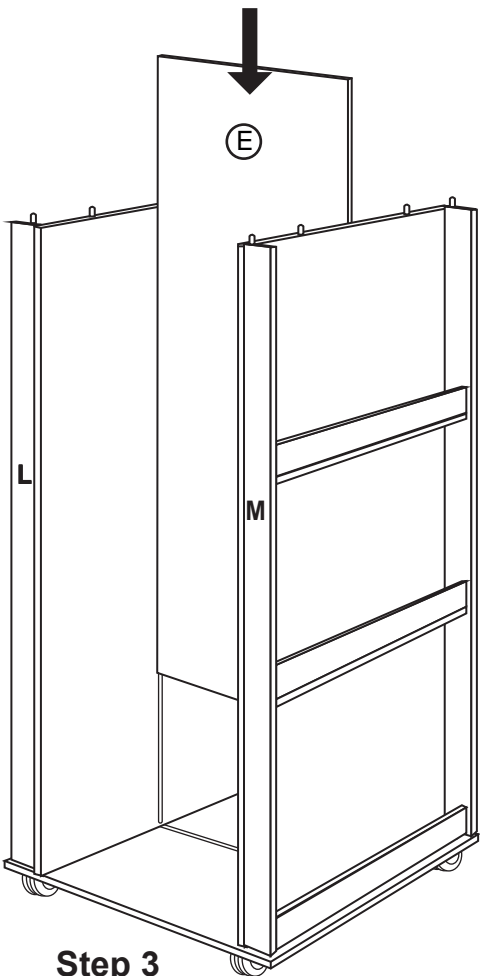

Step 3

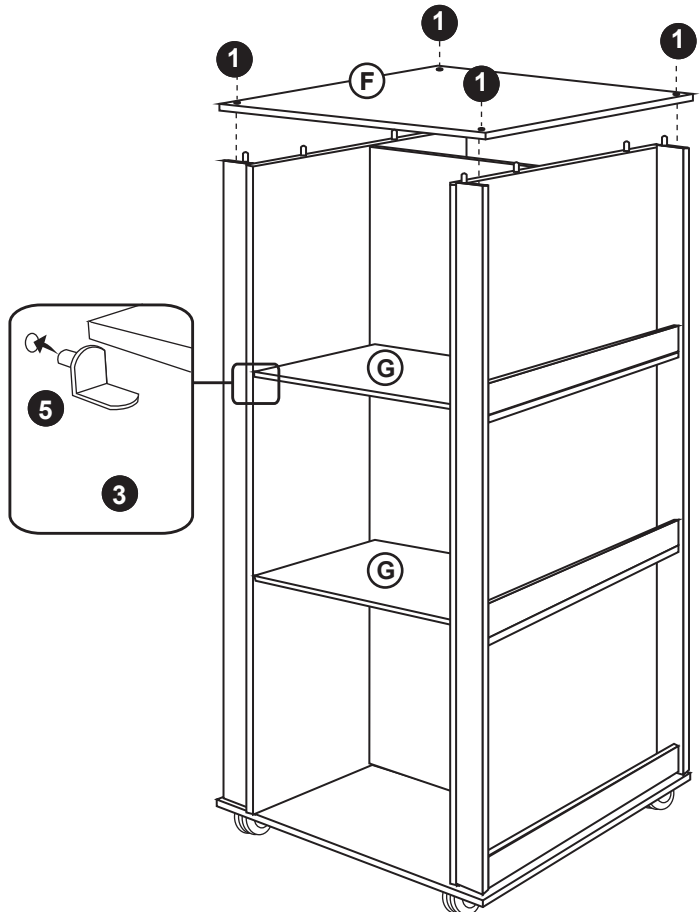

Step 4