

EAS3BLK Easel How To Use



1. When you open the bag, you will find a easel and a tray.



2. Open these covers, and you can adjust each leg to your desired length, then close the cover and the legs will be in a fixed position.



3. Open the legs, where you will find two screws on the front two legs. This is used to fix the tray to the tripod.



4. Once the tray fixed it should look like the picture above.



5. The tray comes with a belt that is connected the third leg (back Leg) for added stability.



6. Open this cover to adjust the top part of the tripod. This top part can move up and down in order to fit different photo frames.



7. This easel can fit frames from 30cm to 75cm high.