


EVENT TENT

STEP 1



Step 1: Remove the contents from the box. You will find a white canopy, canopy frame and canopy cover.

STEP 2

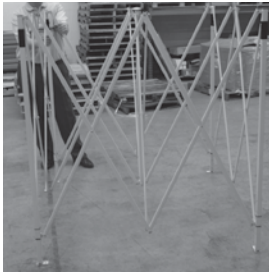

Step 2: With two people, slowly pull the frame out.

STEP 3



Step 3: When the frame is partially expanded, unfold the cover and place it on top of the frame.

STEP 4



Step 4: Join the V elcro® fasteners at each corner where the canopy meets the frame.



STEP 5



Step 5: Again with two people, fully expand the unit. One person must snap the center in place by going under the canopy and pushing up on the middle section.

STEP 6



Step 6: Unscrew the nuts from the bolts in the center of each side of the canopy top.

STEP 7



Step 7: Secure the canopy in place by inserting the bolts into the eyelets located in the center overhang of each side of the canopy. Screw the nuts back in place. Now when you collapse the unit, the canopy folds right into the frame, making the next set up easier.

STEP 4



Step 4: Expand the legs to the desired height by pushing in the buttons and snapping them securely in place.