



FSRTS20P

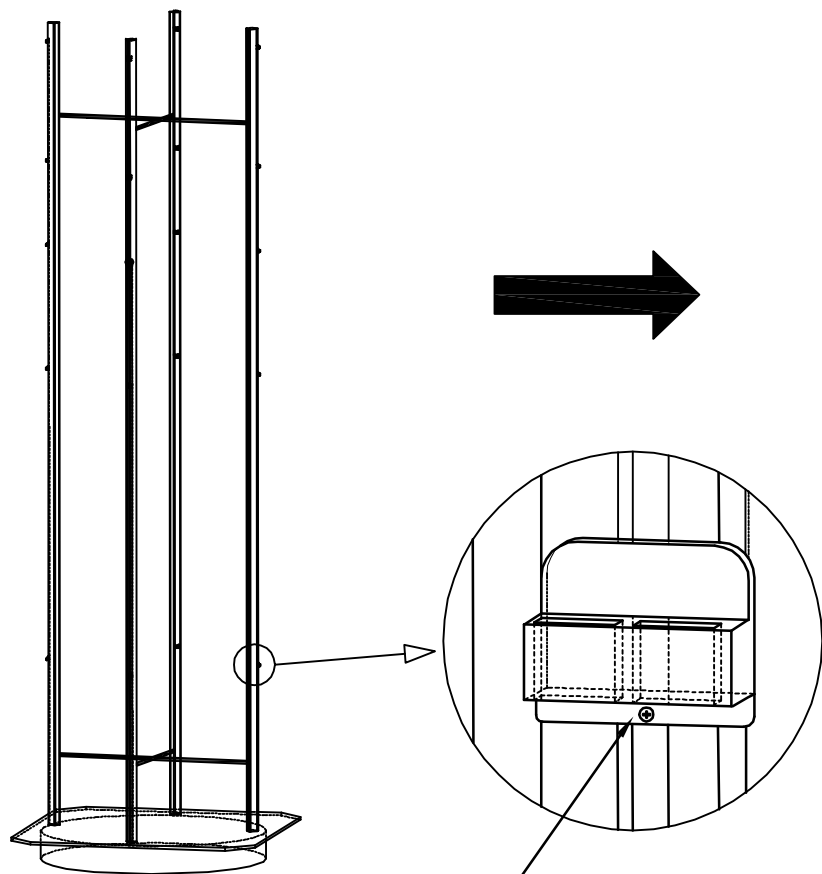

STEP1

Loose the screw and move the slot to suitable place.
Then tighton the screw again

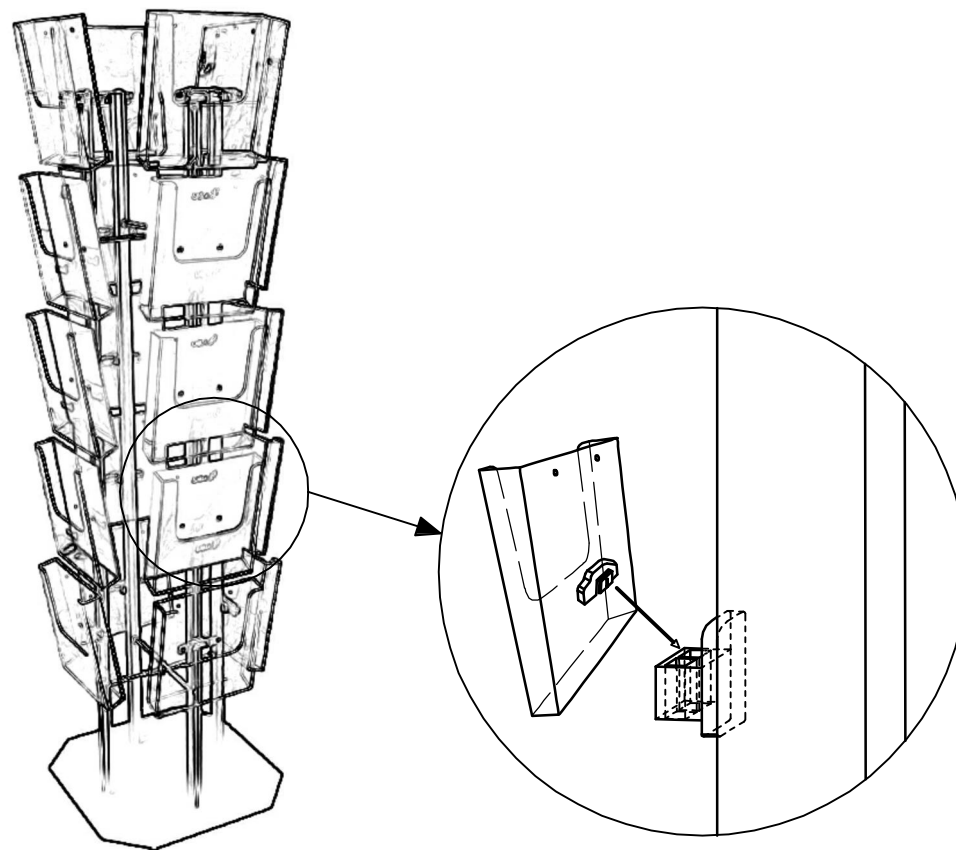

STEP2

Just put holder into the slot