


FSRT4S40P

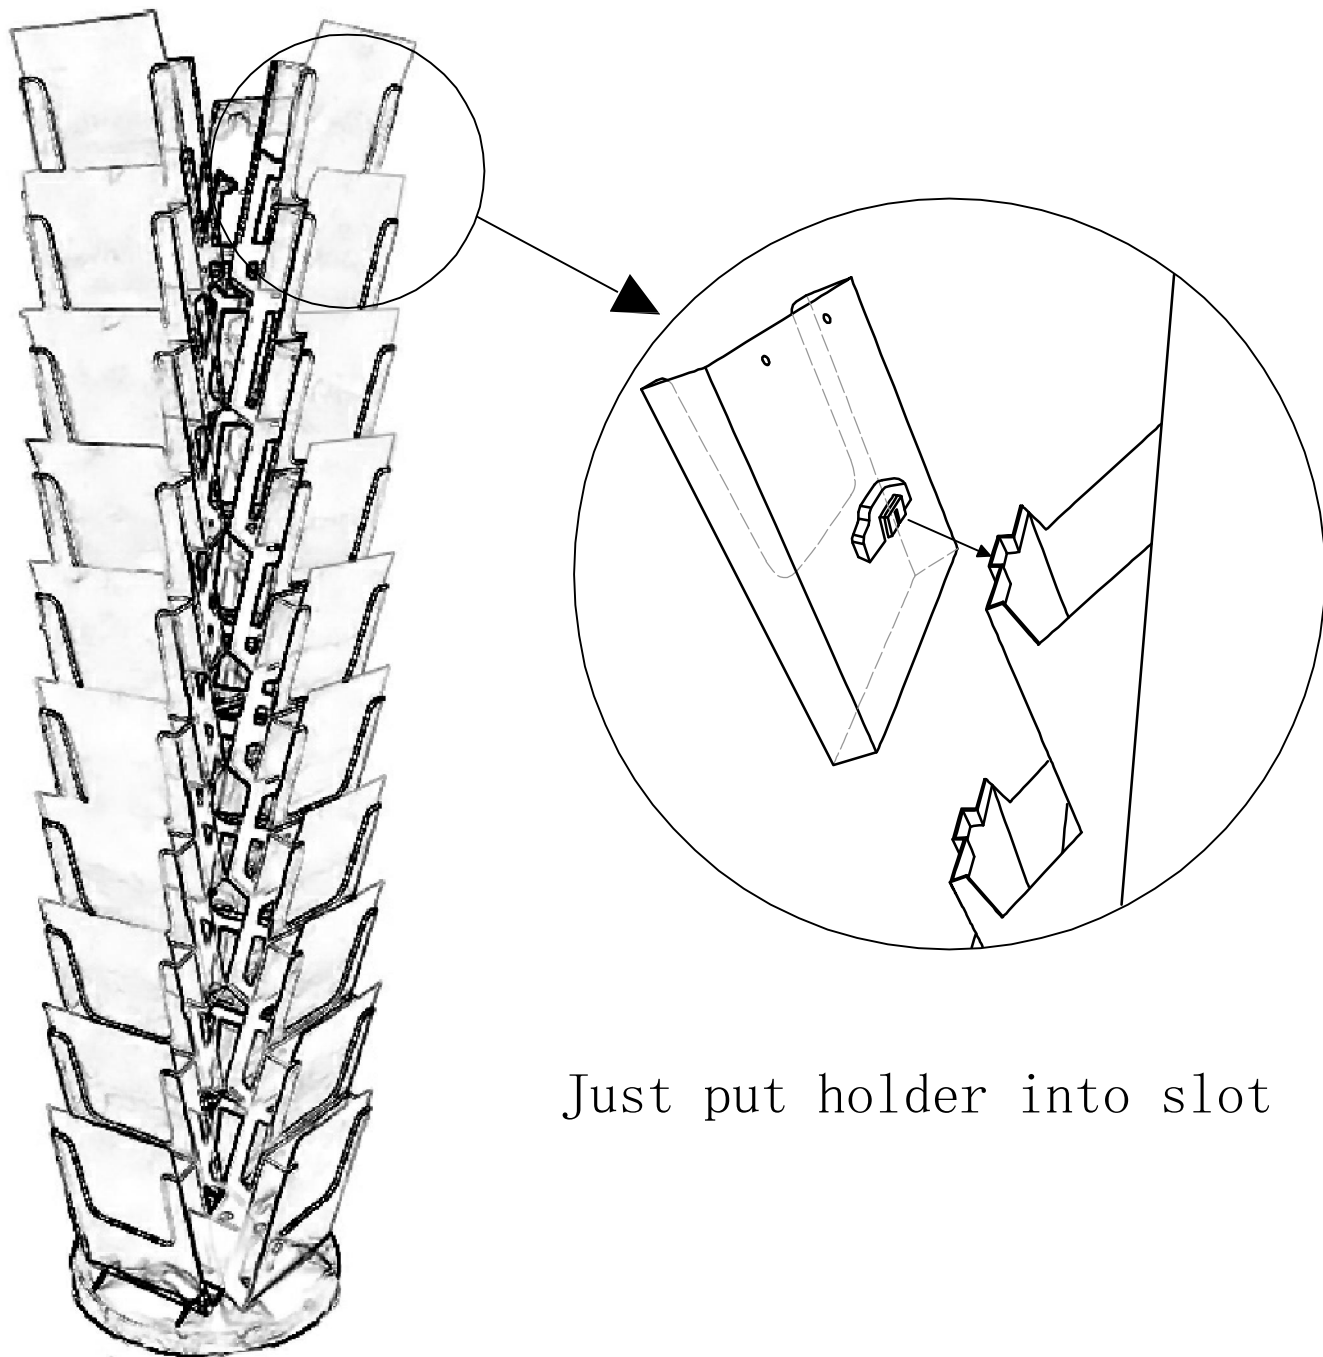

Just put holder into slot