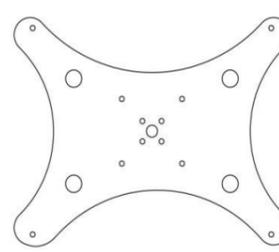
 
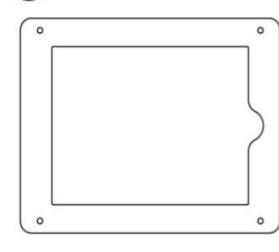
 
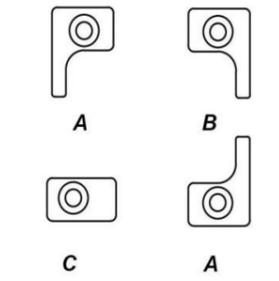
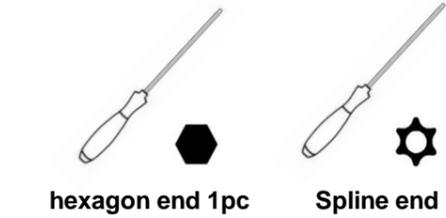



User Manual

Thank you for ordering 2-in-1 floor and table tablet kiosk stand. Let's start setting it up!

Parts you will find


<p>1 Aluminium Plate</p> 	<p>2 Bended tube</p> 	<p>3 Straight tube</p> 
<p>4 Acrylic Cover</p> 	<p>6 Long Screw "a" 8pcs</p> 	<p>10 Base</p> 
<p>5 Acrylic Corner</p> 	<p>7 Short Screw "b" 4pcs</p> 	
	<p>8 Flat end Screw "c" 4pcs</p> 	
	<p>9 Screwdriver</p>  <p>hexagon end 1pc Spline end 1pc</p>	

Before assembling please prepare the extension cable if you want power routing through stand. Cable not included

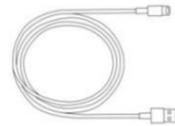

Step1 Base and Straight Tube Connection


Please remember to insert cable when install if need power routing.

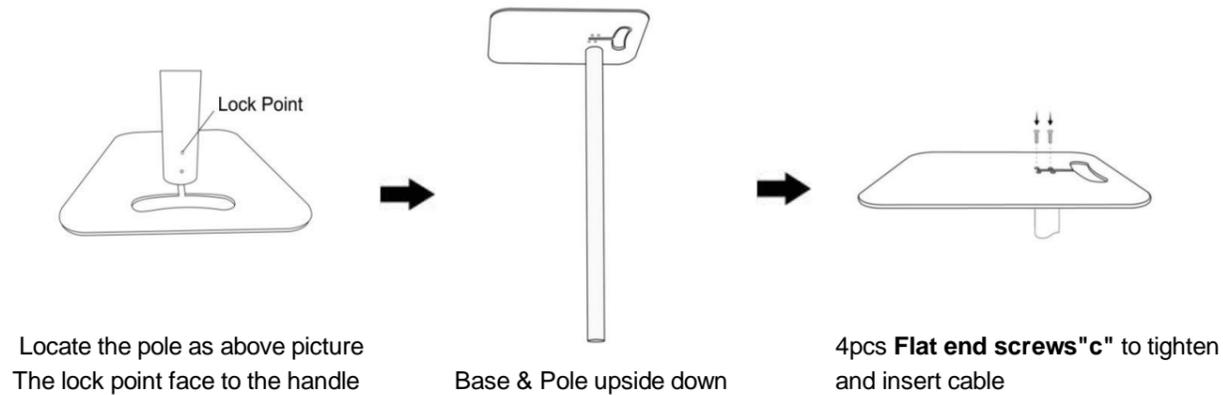

Locate the pole as above picture
The lock point face to the handle

Base & Pole upside down

4pcs Flat end screws "c" to tighten and insert cable

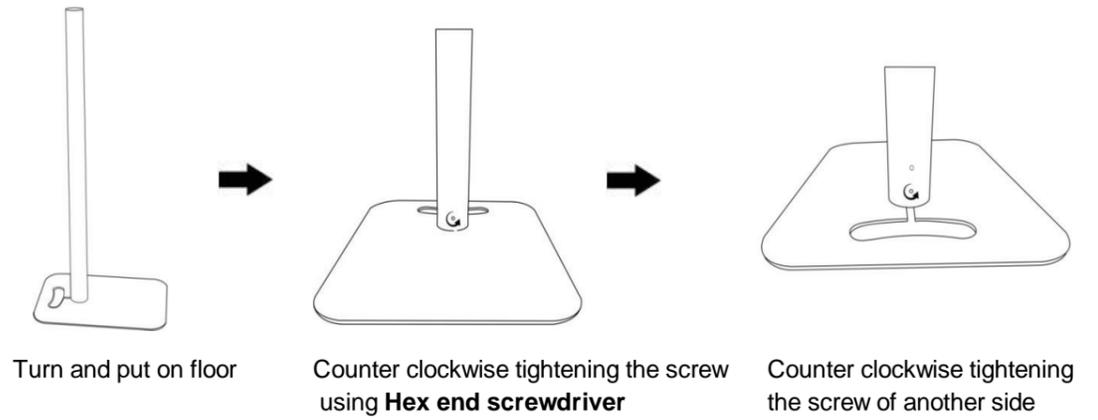


Turn and put on floor

Counter clockwise tightening the screw using Hex end screwdriver

Counter clockwise tightening the screw of another side

Step2 Straight Tube and Bended Tube Connection

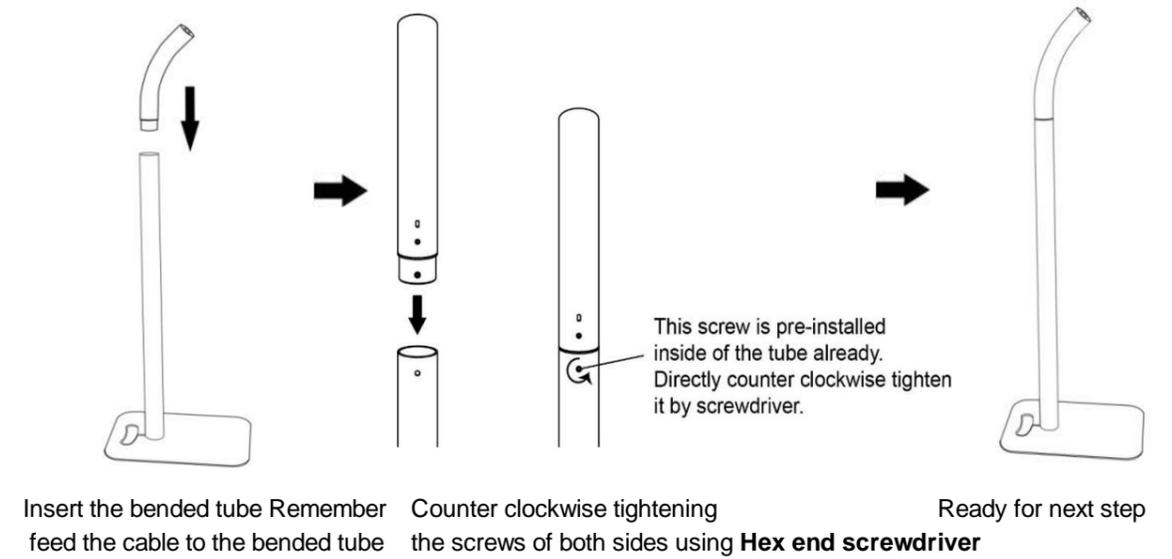

Insert the bended tube Remember feed the cable to the bended tube


Counter clockwise tightening the screws of both sides using Hex end screwdriver

Ready for next step

This screw is pre-installed inside of the tube already. Directly counter clockwise tighten it by screwdriver.

Step3 Connect the Aluminium Plate to the Bended Tube using 4pcs Screw "b" using Spline end screwdriver


Step4 Connect 4pcs Acrylic corners to the Aluminium Plate using 4pcs Screw "a"

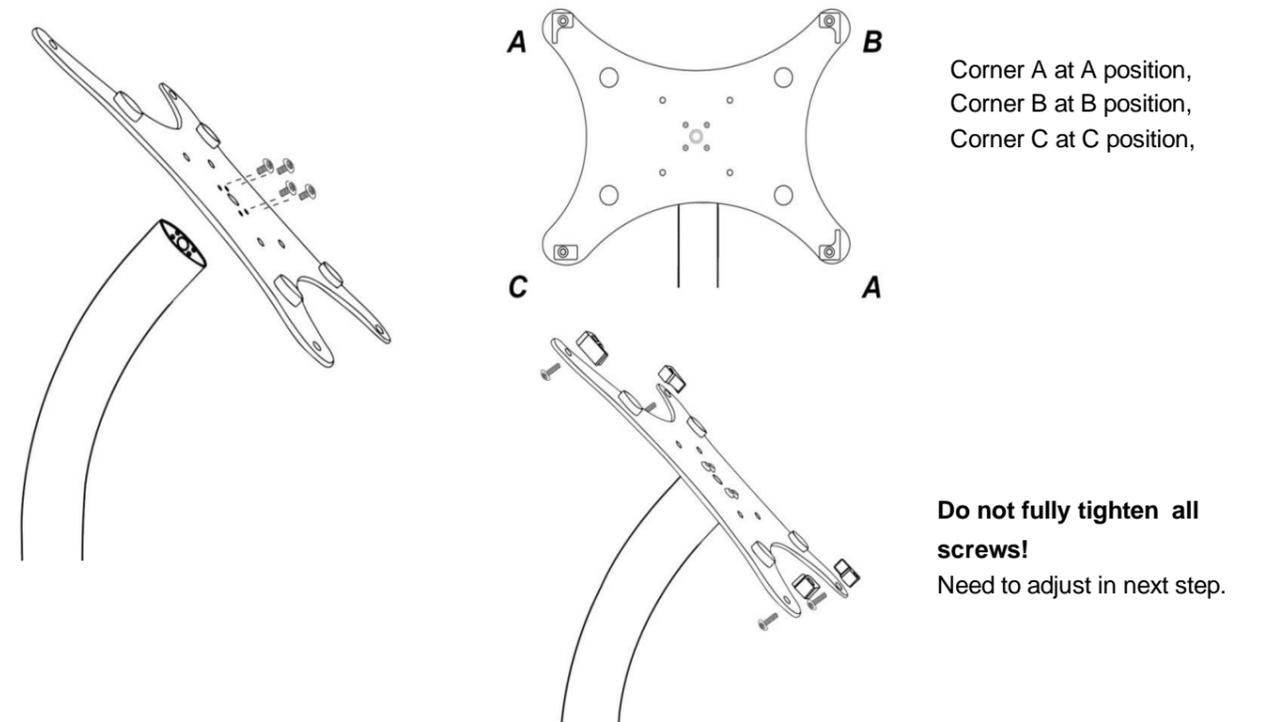



Corner A at A position, Corner B at B position, Corner C at C position,

Do not fully tighten all screws! Need to adjust in next step.

Step5 Add your **Tablet PC** and add the **Acrylic cover** using 4pcs **Screw "a"**.
Fully tighten all screws after installed all parts correctly.

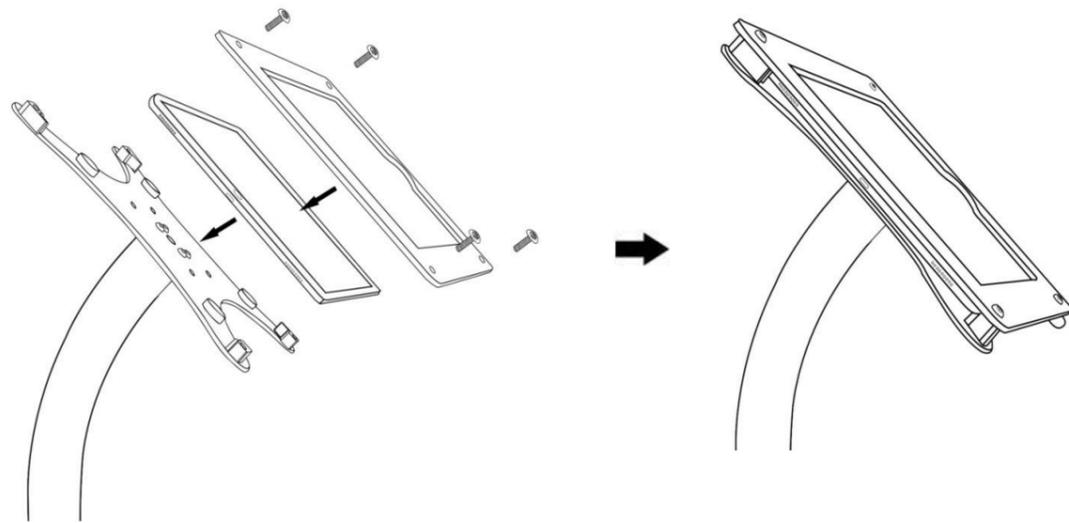


When put the tablet, the **Earphone jack** should be on **C corner** if you want to attach earphone or card reader.

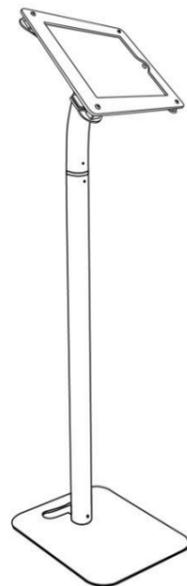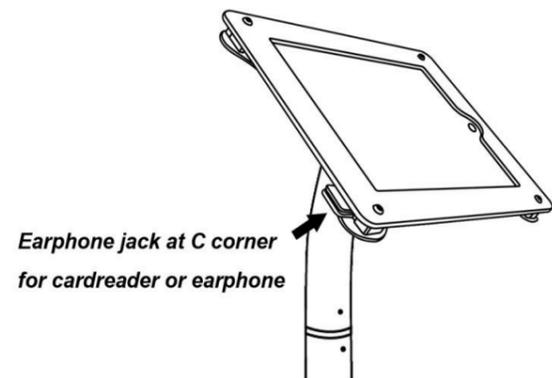

Install Complete



If need table stand just remove the straight pole
Install the bended tube directly to base.

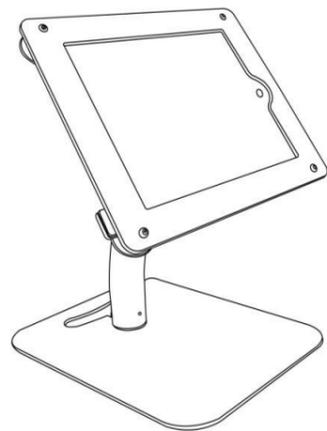

Kensington Security Slot


A Kensington Security Slot can be found on the stand at the bottom of bended tube and straight tube.
A Universal Computer Security Cable can be attached to this slot to add an extra theft deterrent.

Use screwdriver clockwise tighten
to lock the case to be not rotary.

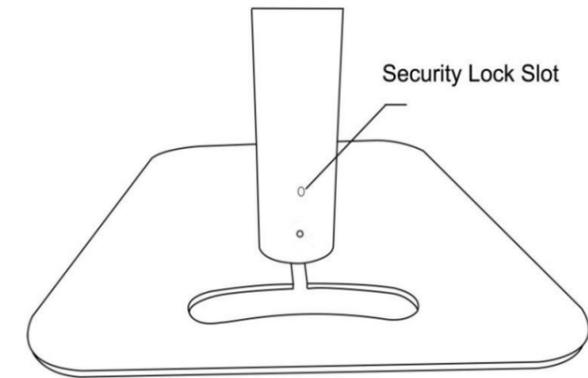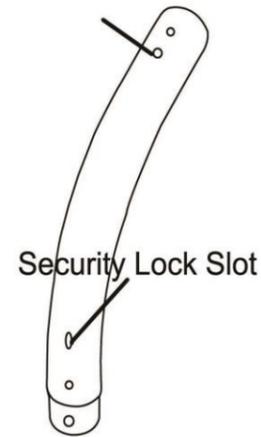


VESA Hole

There are 4 VESA holes on the **Aluminium** so that you can mount the enclosure to any with VESA holes.

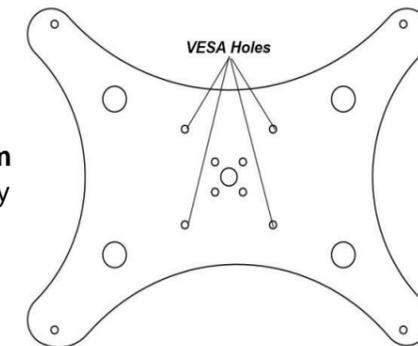

Rotary Function

The enclosure can rotate 360 degree.

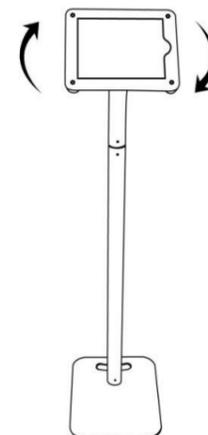

Home Button Covered

If you want the home button covered simply switch the **Acrylic Cover** one end to another.

