


 



 




# MOBILE LECTERN

(with lock version)  
Assembly Instructions

PARTS			HARDWARE BAG							
A	Back Panel	1 pc	H1	Cam Lock	34 pcs		H6	Adjustable Pin	4 pcs	
B	Side Panel	2 pcs								
C	Top Panel	1 pc	H2	Cam Post	34 pcs		H7	Lock	1 pc	
D	Shelf	1 pc								
E	Bottom Panel	1 pc	H3	Wood Screw	18 pcs		H8	Tab	1 pc	
F	Platform Panel	1 pc								
G	Platform Support	2 pcs	H4	Locking Caster	2 pcs		H9	Hinge	1 set	
H	Platform Support back	1 pc								
I	door	1 pc	H5	Non-locking Caster	2 pcs		H10	Caster screw (black color)	4 pcs	

Attention: Before you start assembling your lectern; please prepare a soft surface work area on the floor. The only tool you will need is a screwdriver. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the laminated wood lectern components. To avoid damage to the laminated wood surfaces, keep hardware parts separated until they are needed for assembly.

