

---

Thank you for choosing our product

**⚠ Warning**


This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

1. Make sure these instructions are read and completely understood before attempting installation. If you are unsure of any part of this installation, contact a professional installer for assistance.
2. The wall or mounting surface must be capable of supporting the combined weight of the mount and the display; otherwise the structure must be reinforced.
3. Safety gear and proper tools must be used. A minimum of two people are required for this installation. Failure to use safety gear can result in property damage, serious injury or death.

---

## INSTALLATION GUIDE

Item No.:MNTW803S


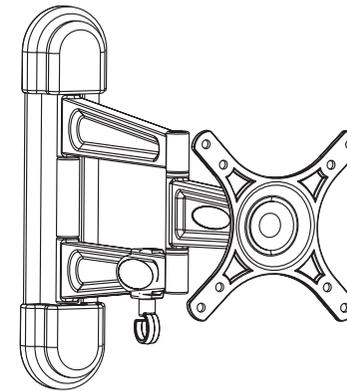


- TV Size Range: 14"~24"
- Maximum Weight Capacity: 15kg/33lbs
- Adjustable angle:  $-5^{\circ}\sim 15^{\circ}$
- Integrated Cable management

**⚠ CAUTION**

This product was designed to be installed on wood stud walls and solid concrete walls. Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Never exceed the Maximum Load Capacity. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury.


### Hardware Kit:

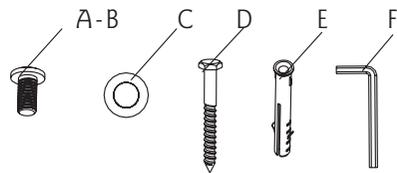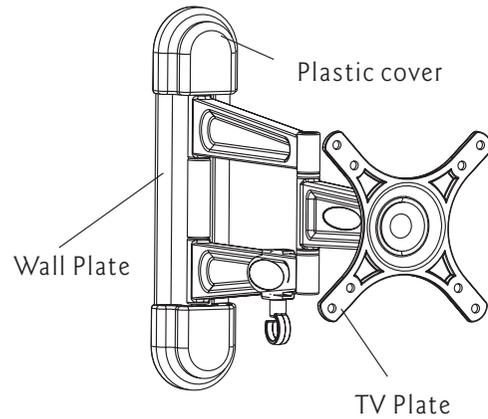

ID	Qty	Description
A	4	M4x12mm bolt
B	4	M5x12mm bolt
C	4	M5 Washer
D	2	Long bolt
E	2	Concrete anchor
F	1	Allen wrench

### Part 3-Adjusting display and using cord management

Route cords along articulating arms using cord management clip. Articulating arms can be adjusted to position display into desired location. Use allen wrench (F) to tighten and loosen the tension screw. Do not overtighten and do not loosen to the point the screws come out.

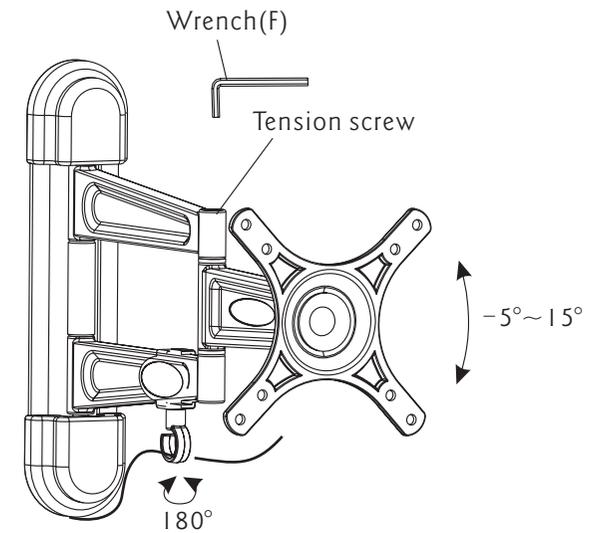


Cable management clip  
Cable routing access points

---

### Part 3-Attaching plastic covers to wall plate



Secure plastic covers over wall plate by pushing them toward each other until they lock in place.

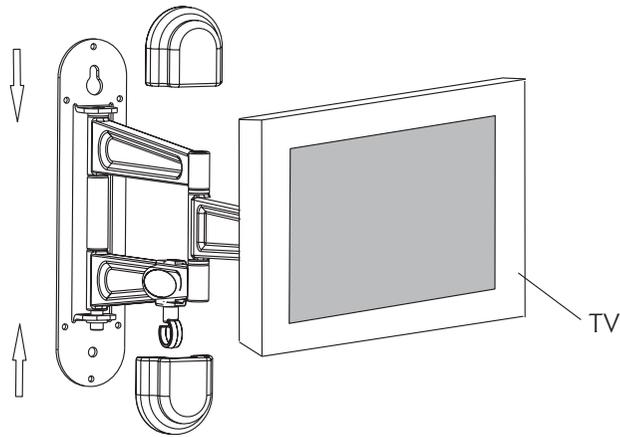

---


### Part 1-Attaching TV Plate To Screen

Center TV plate vertically on back of screen. Select the small (A), medium (B) screws. Attach TV plate to screen using four selected screws and four washers (C). Tighten screws firmly. Do not overtighten.

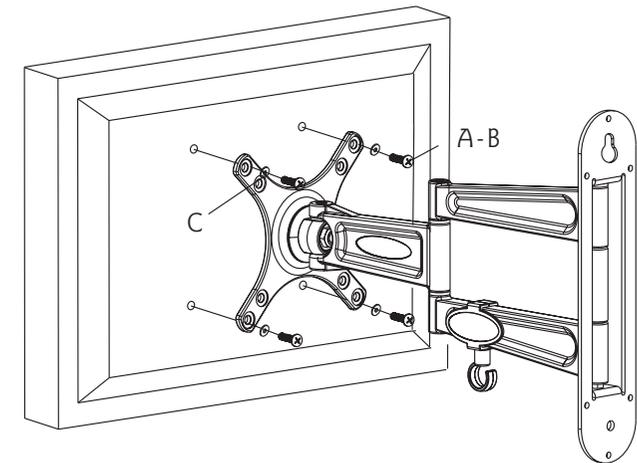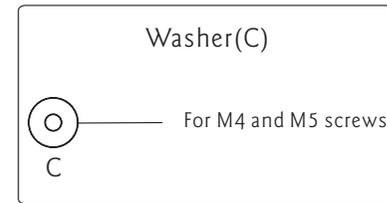


## Part 2a-Wood Stud Mounting

Use wall plate as a template, make sure it is level, and mark two mounting holes along the center line of the wood stud. Drill two 3/16" (4.5mm) dia. Holes 2" (50mm) deep. Put one screw (D) into the upper hole without tightening, hang the TV bracket onto the screw, and then put the other screw (D) into the lower hole. Tighten the screw firmly. Do not overtighten.

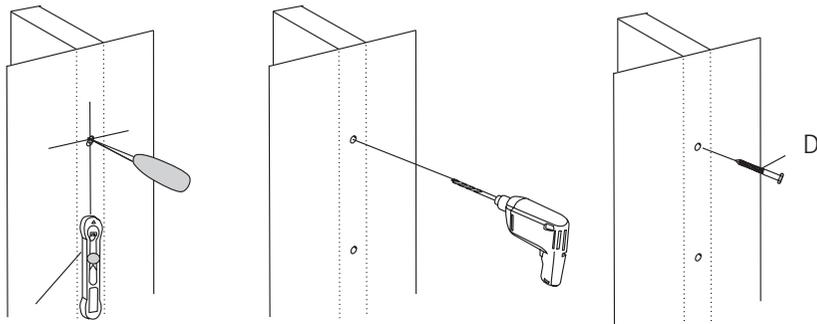

Stud finder

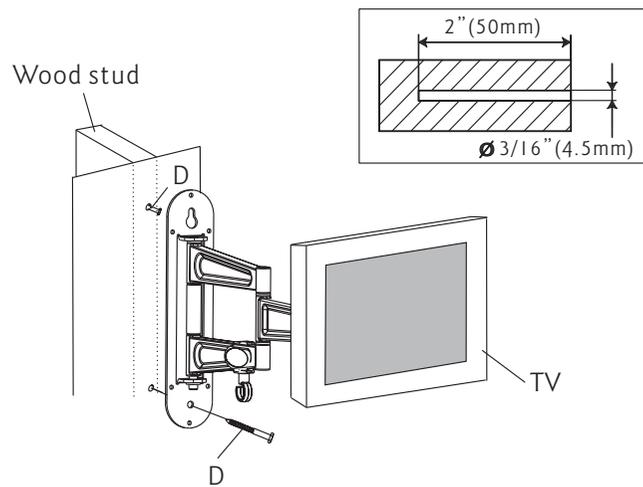

## Part 2b-Concrete Wall Mounting

Level wall plate and use wall as a template to mark two holes. Drill two 3/8" (10mm) dia. holes 2" (50mm) deep. Insert two anchors (E) into holes and put one screw (D) into the upper hole without tightening, hang the TV bracket onto the screw, and then put the other screw (D) into the lower hole. Tighten the screw firmly. Do not overtighten.

