

VSM Banner Stand Assembly Instructions



Start by extending the legs. The front legs are able to spread farther apart than shown, but this is not necessary.



Raise the banner arms and attach the banner on both sides. Ensure that the grommets are fully seated in the clips.




Loosen the center lock by bringing it to the center position. Raise the center pole about 2/3 of the total height. Secure the center lock by pushing down on one side. Note: This step is shown without the banner attached for visibility.



Attach the banner to one of the front legs as shown. Ensure that the grommet is fully seated on the clip.



You will now have a display that looks similar to this.

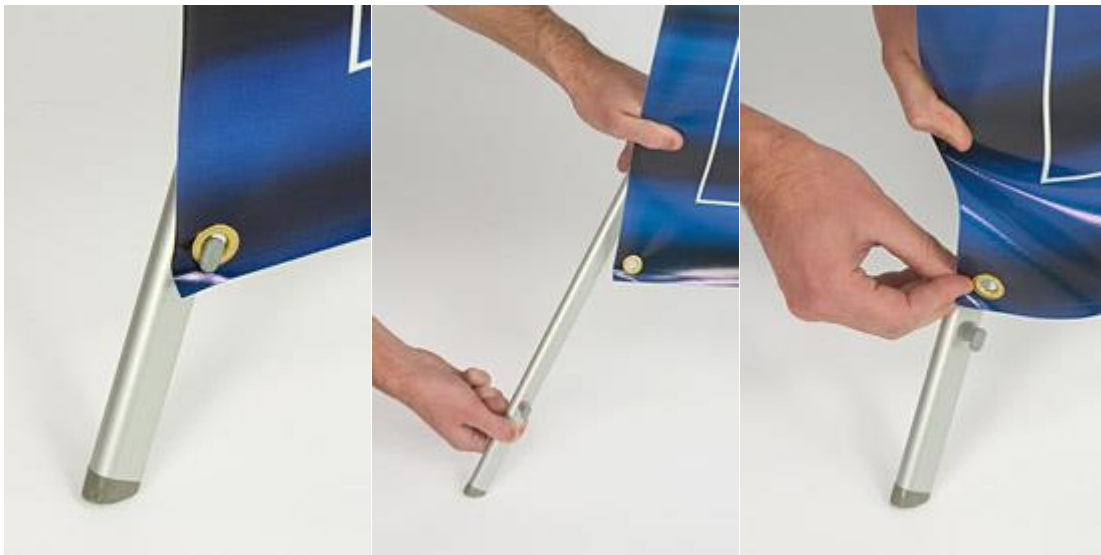

Attach the banner to the remaining front leg. Ensure that the grommet is fully seated on the clip.

Note: If your banner is leaning forward or backward at the top this can be fixed by adjusting the height of the center pole. The bottom of the banner should be disconnected from the frame to release tension before adjusting the height of the center pole.