 





WIRELESS CHARGING CAFE TABLE

WRLSTB24, WRLSTB30 SERIES

Assembly Instructions

PARTS			HARDWARE BAG							
A	Bottom Base	1 pc	H1	Bottom Base Screw	1 pc		H3	Plate Nut	2 pcs	
B	Column	1 pc								
C	Plate	1 pc	H2	Glides	4 pcs		H4	Wood Screw	8 pcs	
D	Table Top	1 pc								

Attention: Before you start assembling your table top; please prepare a soft surface work area on the floor. The only tool you will need is a screwdriver. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the laminated wood components. To avoid damage to the laminated wood surfaces, keep hardware parts separated until they are needed for assembly.

 
 
ASSEMBLY INSTRUCTIONS

Step 1: Attach glides (H2) to bottom base (A).

Step 2: Attach column (B) to bottom base using bottom base screw (H1).

Step 3: Slide purse hook over column and secure by tightening screw.

Step 4: Attach plate (C) to column using plate nuts (H3).

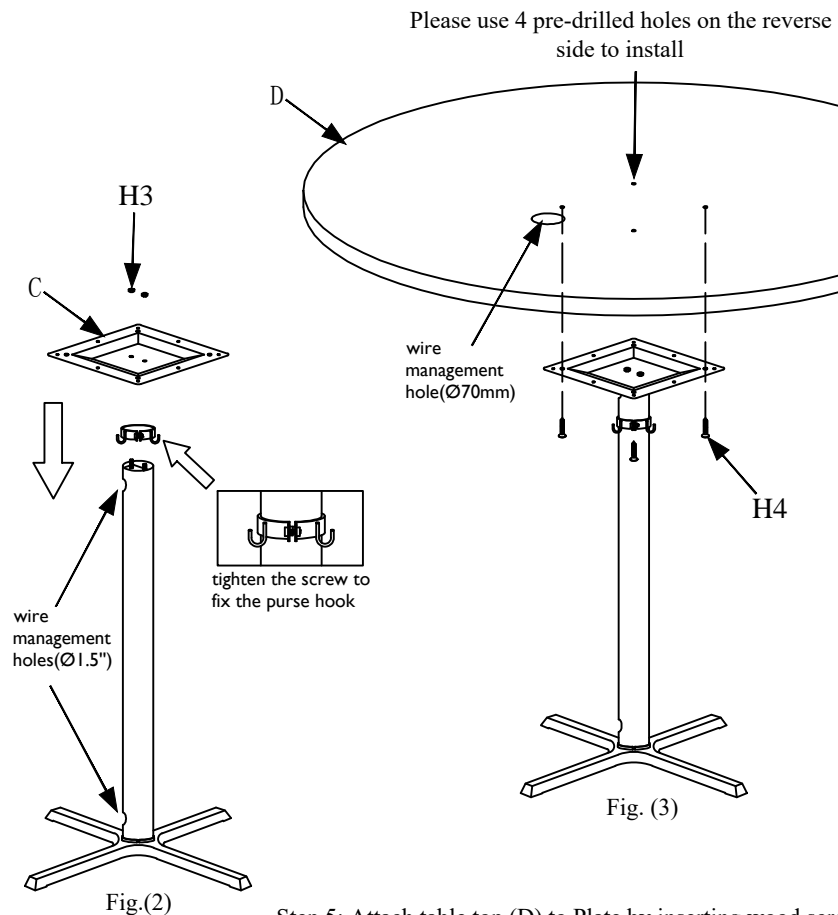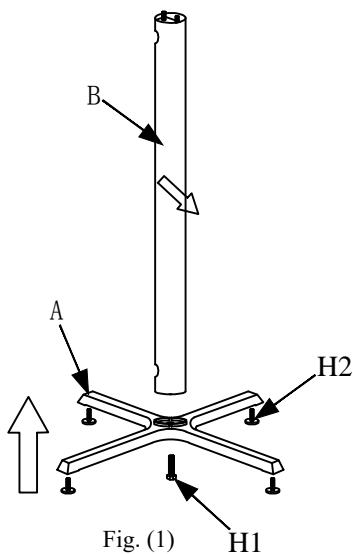

Step 5: Attach table top (D) to Plate by inserting wood screws (H4) through holes in plate and into table top.

Step 6: Insert power cord through top wire management hole (shown in Figure 2) down column, and exit out of bottom wire management hole.