

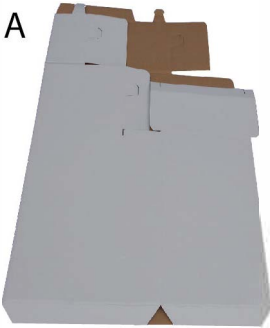
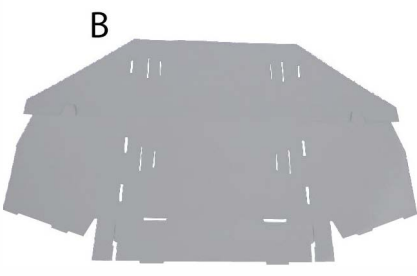



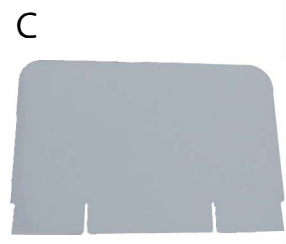


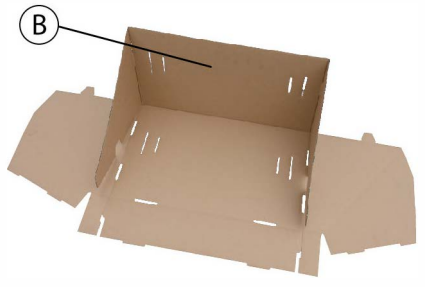



# ASSEMBLY INSTRUCTIONS

## 3TCBFDBK

PARTS LIST	QTY	A	B	C
A. BASE	1			
B. TRAY	3			
C. HEADER	1			

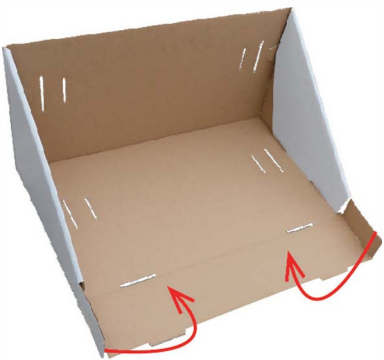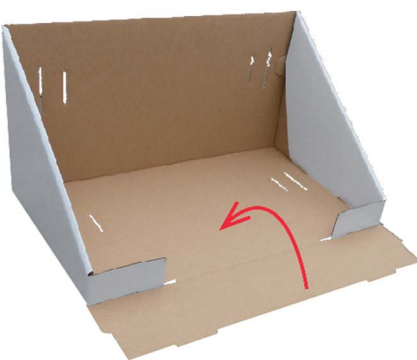
### INSTRUCTIONS
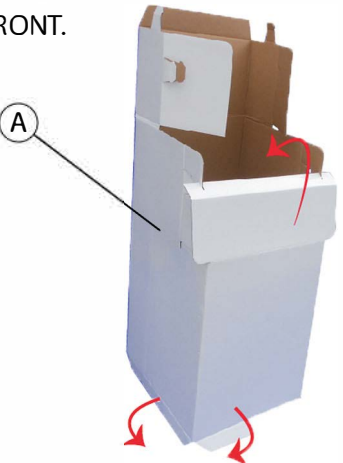
<p>1. FOLD UP THE TOP HALF PANEL.</p> 	<p>2. FOLD RIGHT &amp; LEFT FLAPS. INSERT TABS ON SIDE FLAPS INTO SLOTS.</p> 	<p>3. FOLD SIDE FLAPS INWARD ALONG THE EDGES ON BOTH SIDES.</p> 
<p>4. FOLD IN 2 TABS BACKWARD.</p> 	<p>5. FOLD THE FRONT LIP UP.</p> 	<p>6. FOLD THE TOP FLAP OVER AND PUSH TABS INTO SLOTS.</p> 
<p>7. THE CARDBAORD TRAY IS READY. REPEAT ABOVE STEPS TO SET UP 2 MORE TRAYS.</p> 	<p>8. UNFOLD BASE AND SQUARE UP. FOLD ALL PANELS AT BOTTOM INWARD. FOLD IN MIDDLE PANEL AT FRONT.</p> 	<p>9. THE BASE IS READY.</p> 


# ASSEMBLY INSTRUCTIONS

## 3TCBFDWT

10. ATTACH ONE CARDBOARD TRAY TO THE BASE.

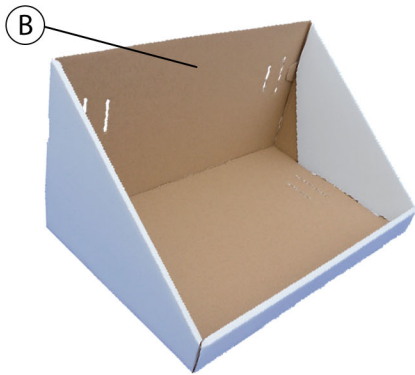


11. INSERT TABS ON THE FRONT OF THE BASE INTO THE CORRESPONDING SLOTS ON THE BACK OF THE TRAY. FOLD TABS TO THE MIDDLE TO LOCK IT.

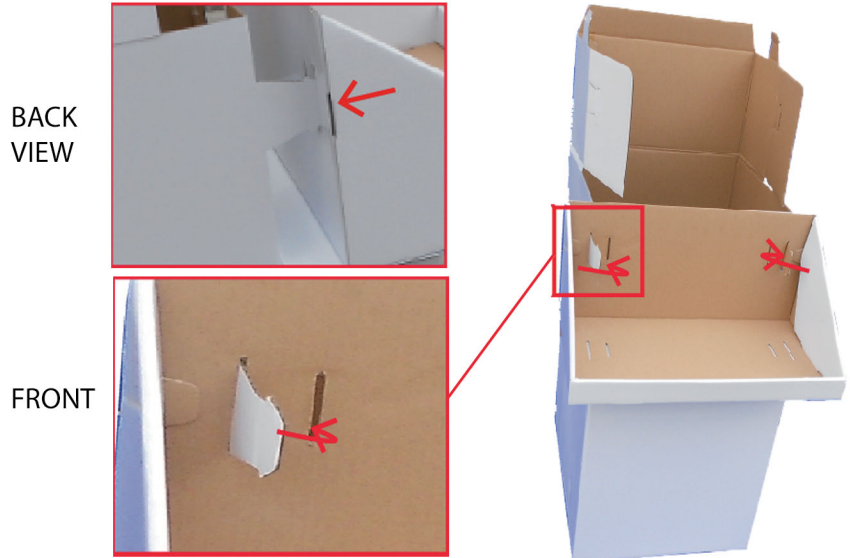


12. THE BOTTOM TRAY IS DONE AND DO THE SAME TO ASSEMBLE THE MIDDLE TRAY.



13. INSERT 2 TABS AT THE TOP OF THE BASE INTO THE SLOTS IN THE BOTTOM OF THE LAST TRAY, THEN FOLD 2 TABS TO THE MIDDLE AND LOCK IT IN PLACE.

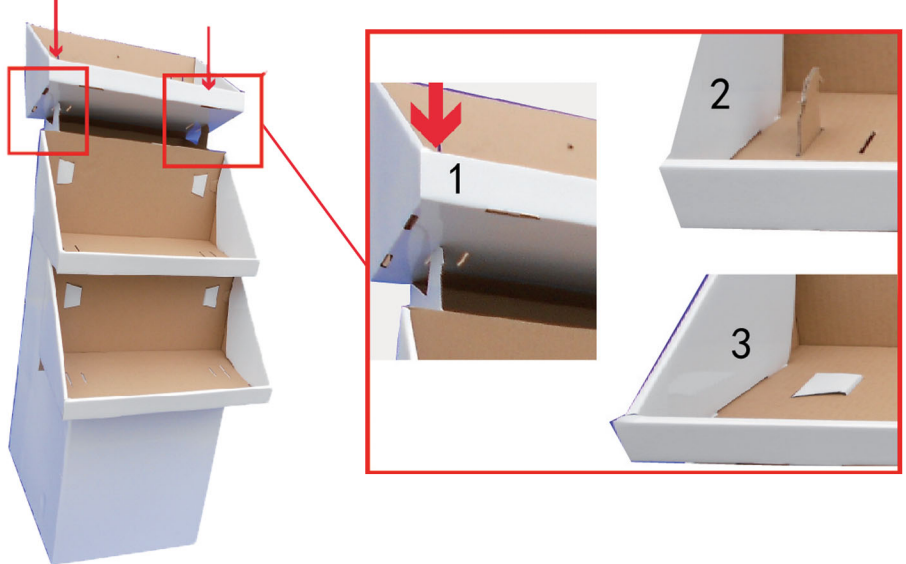

14. ASSEMBLY OF THE BASE AND TRAYS IS DONE, READY TO ATTACH THE HEADER ON THE TOP.

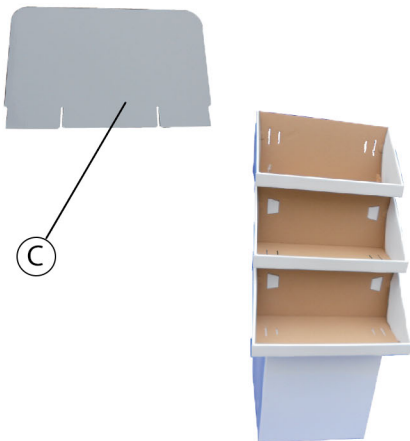

15. INSERT THE HEADER INTO THE TOP TRAY AT THE CUT OUT SLOTS.



16. THE ASSEMBLY IS COMPLETED.

