

# STANDARD FLEXPOST™ ANCHORING INSTRUCTIONS FOR CONCRETE


## Tools Required:

- Marker / Wax Pencil
- High Speed Power Drill
- 1/2" Masonry Drill Bit
- Socket Wrench with 3/4" drive


## Parts Included:

- 1 Base Plate
- 4 Concrete Wedge Bolts

**WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY**

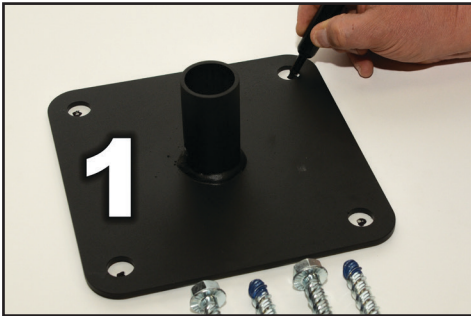

- Place base plate in desired anchoring location
- Mark the four base holes with a wax pencil

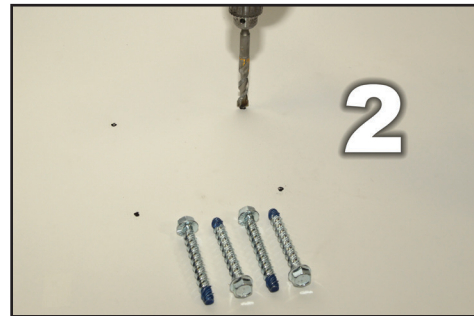

- Using a 1/2" masonry bit, drill 5" in depth



- Place the base plate over the four holes and use a socket wrench with a 3/4" drive to thread all four bolts



- Tighten all 4 bolts so the base plate is flush with the concrete



2236 112th Ave, Suite 80  
Holland, MI 49424  
616-928-0829 • [www.FlexpostInc.com](http://www.FlexpostInc.com)