


ASSEMBLY INSTRUCTIONS

TRASH RECEPTACLE - "THANK YOU" & RECYCLING

DISPLAYS2GO

PARTS		
A	Top Panel	2pcs
B	Side Panel	3pcs
C	Bottom Panel	2pcs
D	Back Panel	1pc
E	Shelf	1pc
F	Toe Kick Panel	2pcs
G	Swing Door	2pcs
g	"THANK YOU" Flip Door	1pc
H	Divider Panel	1pc


HARDWARE			
H1	Cam Lock	54pcs	
H2	Cam Post	54pcs	
H3	Wood Screw	24pcs	
H4	Concealed Hinge	4pcs	

NOTE: A phillips screw driver is needed. 2 people recommended.

ATTENTION: Unpack the unit and confirm all hardware are present. If any hardware required is missing, or if you have any questions regarding our products, please contact D2G customer service.


Assemble the unit on a carpeted floor or on a soft surface work area to avoid any scratch.

1. Insert 2 cam posts (H2) into holes in Panel C. Tighten only until snug. Fit cam holes in the edge of Panel F over the cam posts. Insert 2 cam locks (H1) into cam lock holes on Panel F, use a phillips screw driver to turn cam locks clockwise to secure cam posts. Attached the other Panel F to 2nd Panel C the same way.

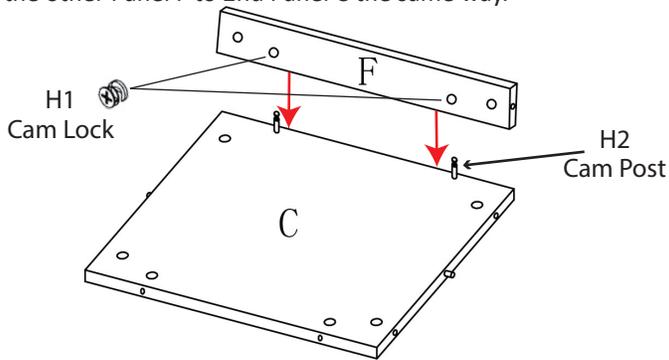


How to join 2 boards with CAM lock:


- (a) Insert cam post into flat surface of a board. Fit the hole in the edge of the joining board over the cam post.
- (b) Each cam lock has an open section at the back. Insert the cam lock into the cam. Be sure the opening fits the head of the cam post.
- (c) Use a screw driver to turn the cam lock clockwise so it locks onto the head of the cam post. Do not over tighten.

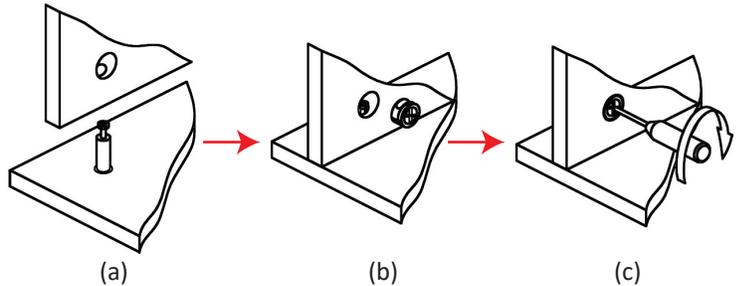

2. Insert cam posts into holes in Panel B as shown below. The Middle Panel B has holes on two sides, insert cam posts into both sides. Place Panel A, E, g, H and assembled Panel C as shown below. Starting from a Side Panel B by laying it on a flat surface, attach all joining panels by fitting cam holes in the edges with corresponding cam posts. Insert cam locks into all cam lock holes in adjoining boards, then tighten all cam locks with a screw driver. Assemble the Middle Panel B and the remaining panels in the picture the same way. Be sure to attach the smaller Panel A above Panel E.

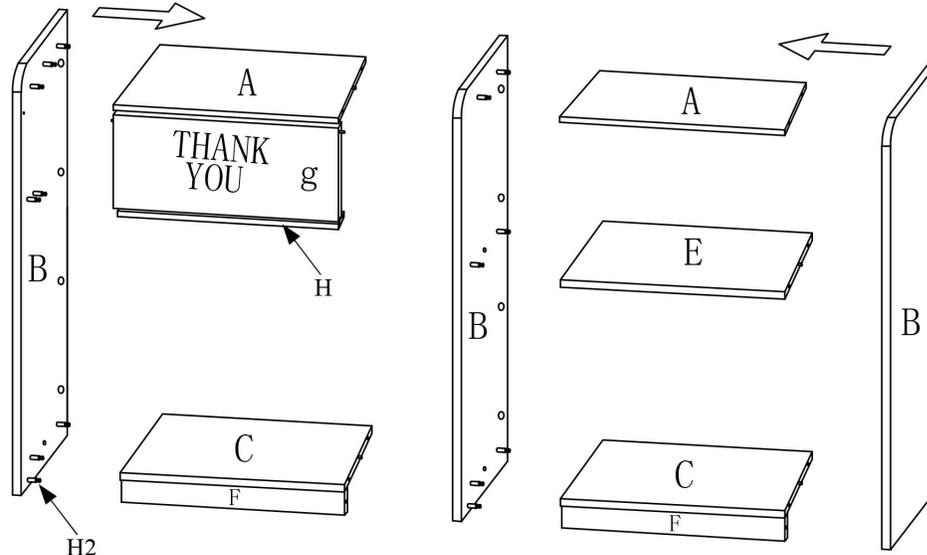

3. Insert rest of the cam posts into the Back Panel D and tighten with the screw driver. Do NOT over tighten. Attach Panel D to the back of the assembled receptacle body by inserting all the installed cam posts into corresponding holes in the edges. Make sure there's no gap between the back panel and the assembled receptacle body. Insert cam locks into cam lock holes from inside and tighten with the screw driver.



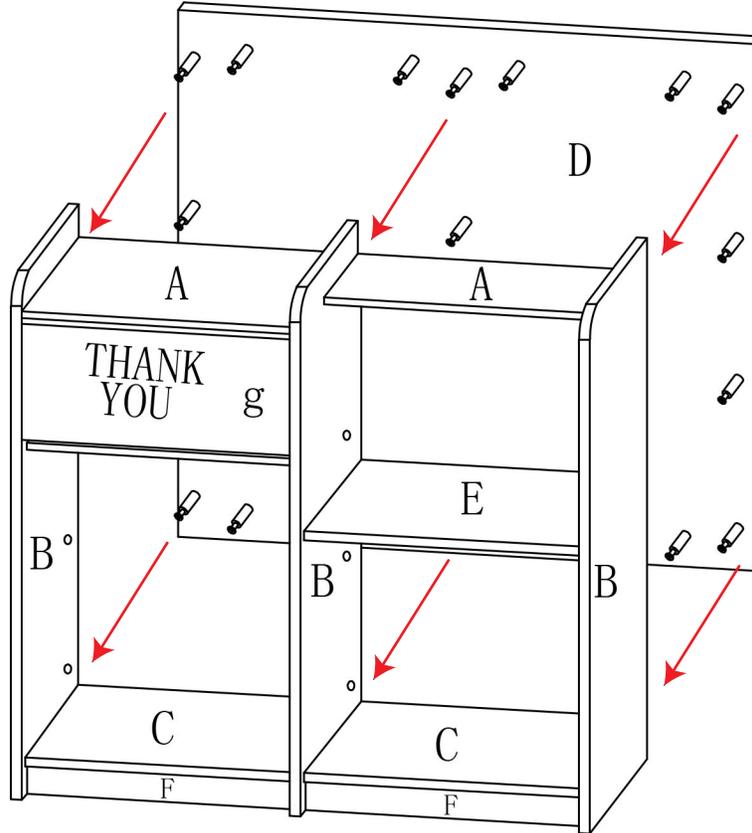


4. Install concealed hinges (H4).

- Press the hinge cup into one flat-bottomed hole in one door panel. Be sure the edge of the hinge is parallel with the edge of the door.
- Drive wood screws (H3) through screw holes in the flange to fix the hinge cup. Secure another hinge cup in the 2nd bored hole in door.
- Attach the Door Panel G with hinges assembled with Panel B. Align holes in the hinge plate with pre-drilled holes in Panel B. Drive wood screws (H3) into pre-drilled holes to fix the door panel.
- Assemble the other swing door on the other side by using the same method. Be sure attach doors at correct locations as shown below.

5. Door Adjustments

Open and close the door a few times to check the alignments. Loosen or tighten the hinge adjustment screws as needed to refine the fit of the door. Turn screws a little at a time until the door reaches desired position and works properly.

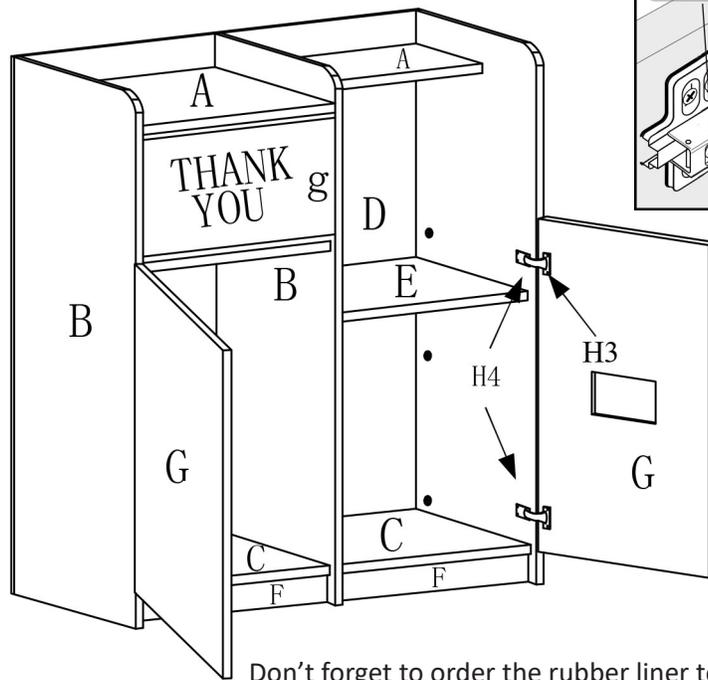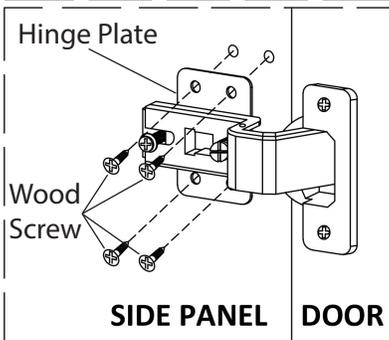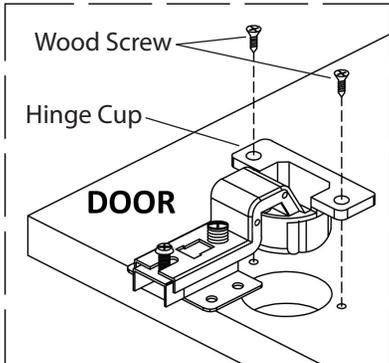

Don't forget to order the rubber liner to finish your receptacle.