


INSTRUCTIONS

PIPELINE SIGNAGE - PPLNSW

PARTS LIST

A. Base	X1
B. Top Bar	X1
C. Connector	X2
D. Pole	X2
E. Caster	X2
F. Rubber Ring	X2
G. Wrench	X1

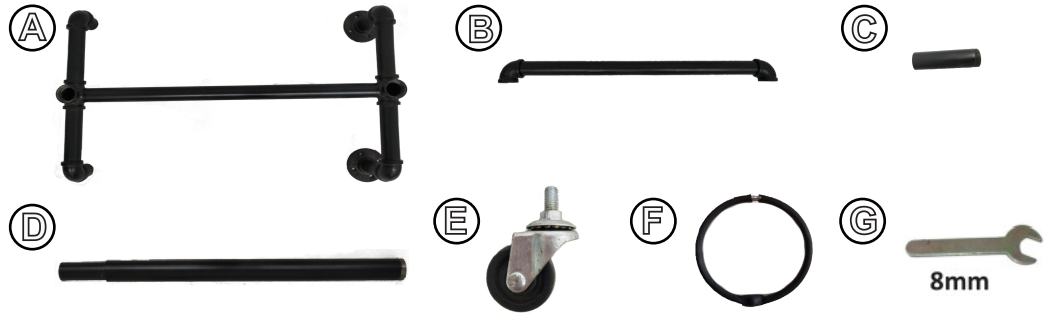

Step 1. Hand screw 2 Connector (C) into the top of the Base (A) as shown below.



Attach 2 Casters (E) to the open ends at the bottom of the Base.



Step 2. Securely screw 2 Poles (D) into the ends of the Top Bar (B).



Step 3. Place the assembled base on a flat ground, and insert the pipe poles into the connectors on the base.



Step 4. Push to open the hanging Rings (F) and hang your sign to the top bar, then Securely close the rings.



Scan QR code to visit the product page:



If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service at 844-221-3388.