


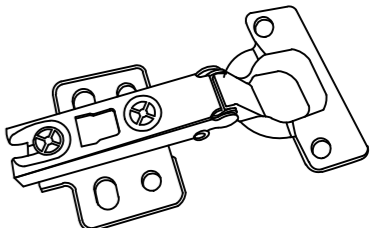




TRASH RECEPTACLE



(Recycling unit)


M8550

Assembly Instructions


PARTS			HARDWARE BAG							
A	Top Panel	1 pc	H1	Cam Lock	28 pcs		H4	Handle Screw	2 pcs	
B	Side Panel	2 pcs								
C	Bottom Panel	1 pc	H2	Cam Post	28 pcs		H5	Hinge	1 set	
D	Back Panel	1 pc								
F	Toe Kick Panel	1 pc	H3	Handle	1 pc		H6	Wood Screw	12 pcs	
G	Door	1 pc								

Attention: Before you start assembling your trash receptacle; please prepare a soft surface work area on the floor. The only tool you will need is a screwdriver. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the laminated wood components. To avoid damage to the laminated wood surfaces, keep hardware parts separated until they are needed for assembly.

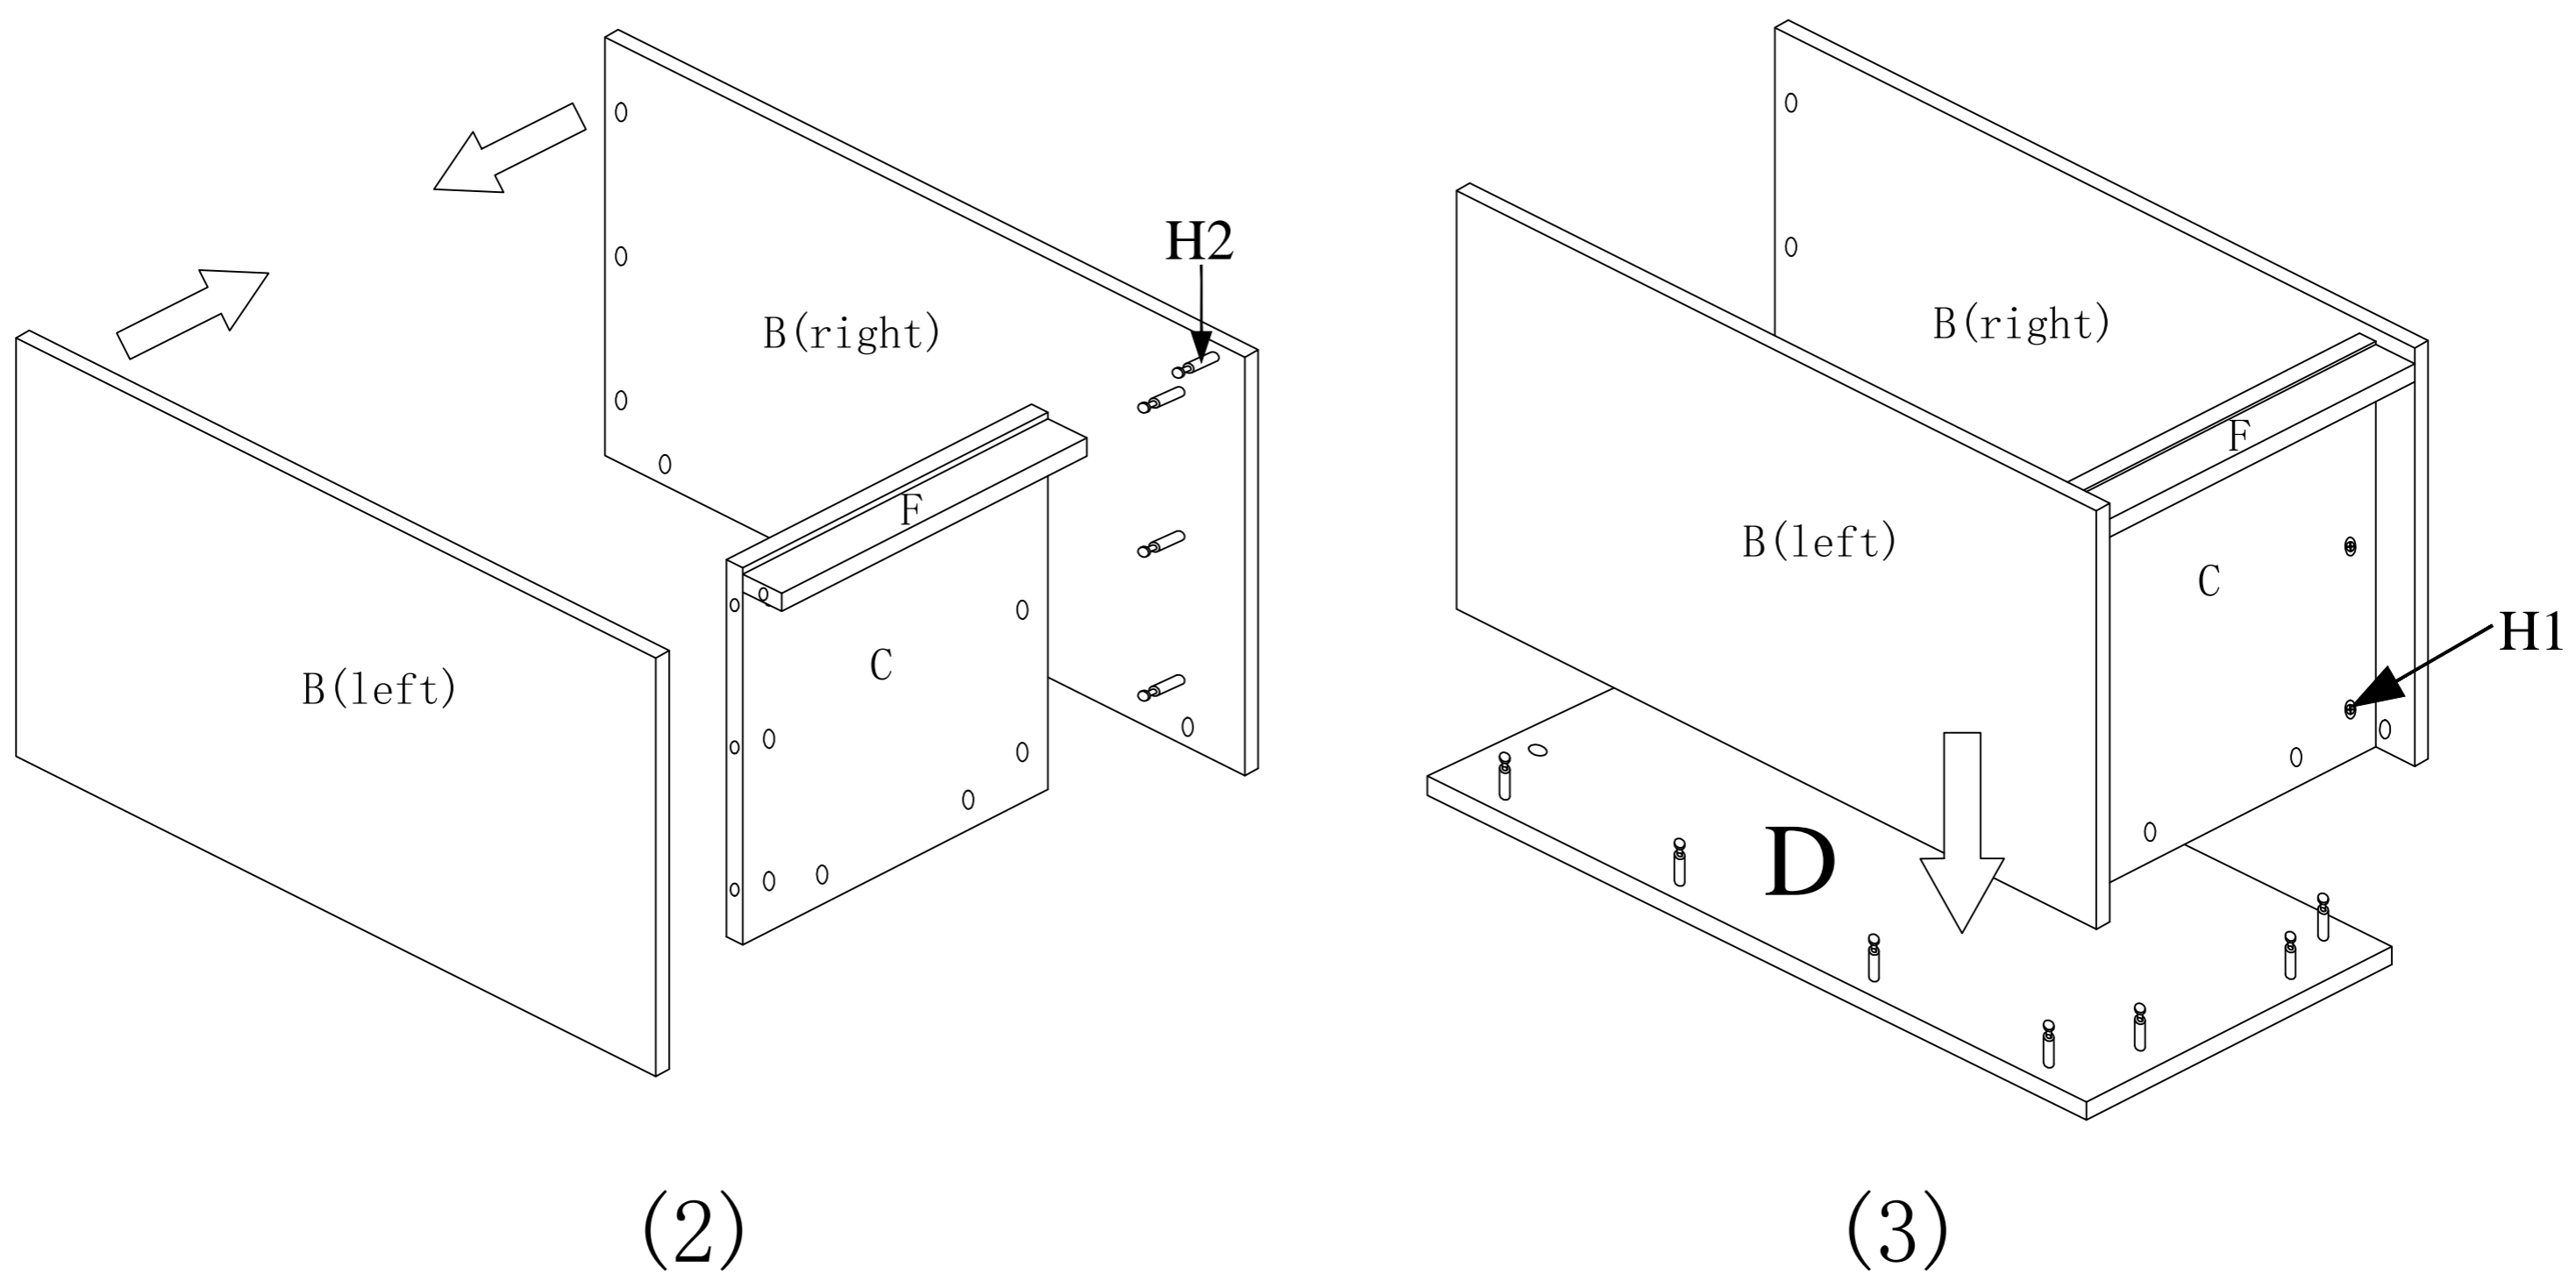
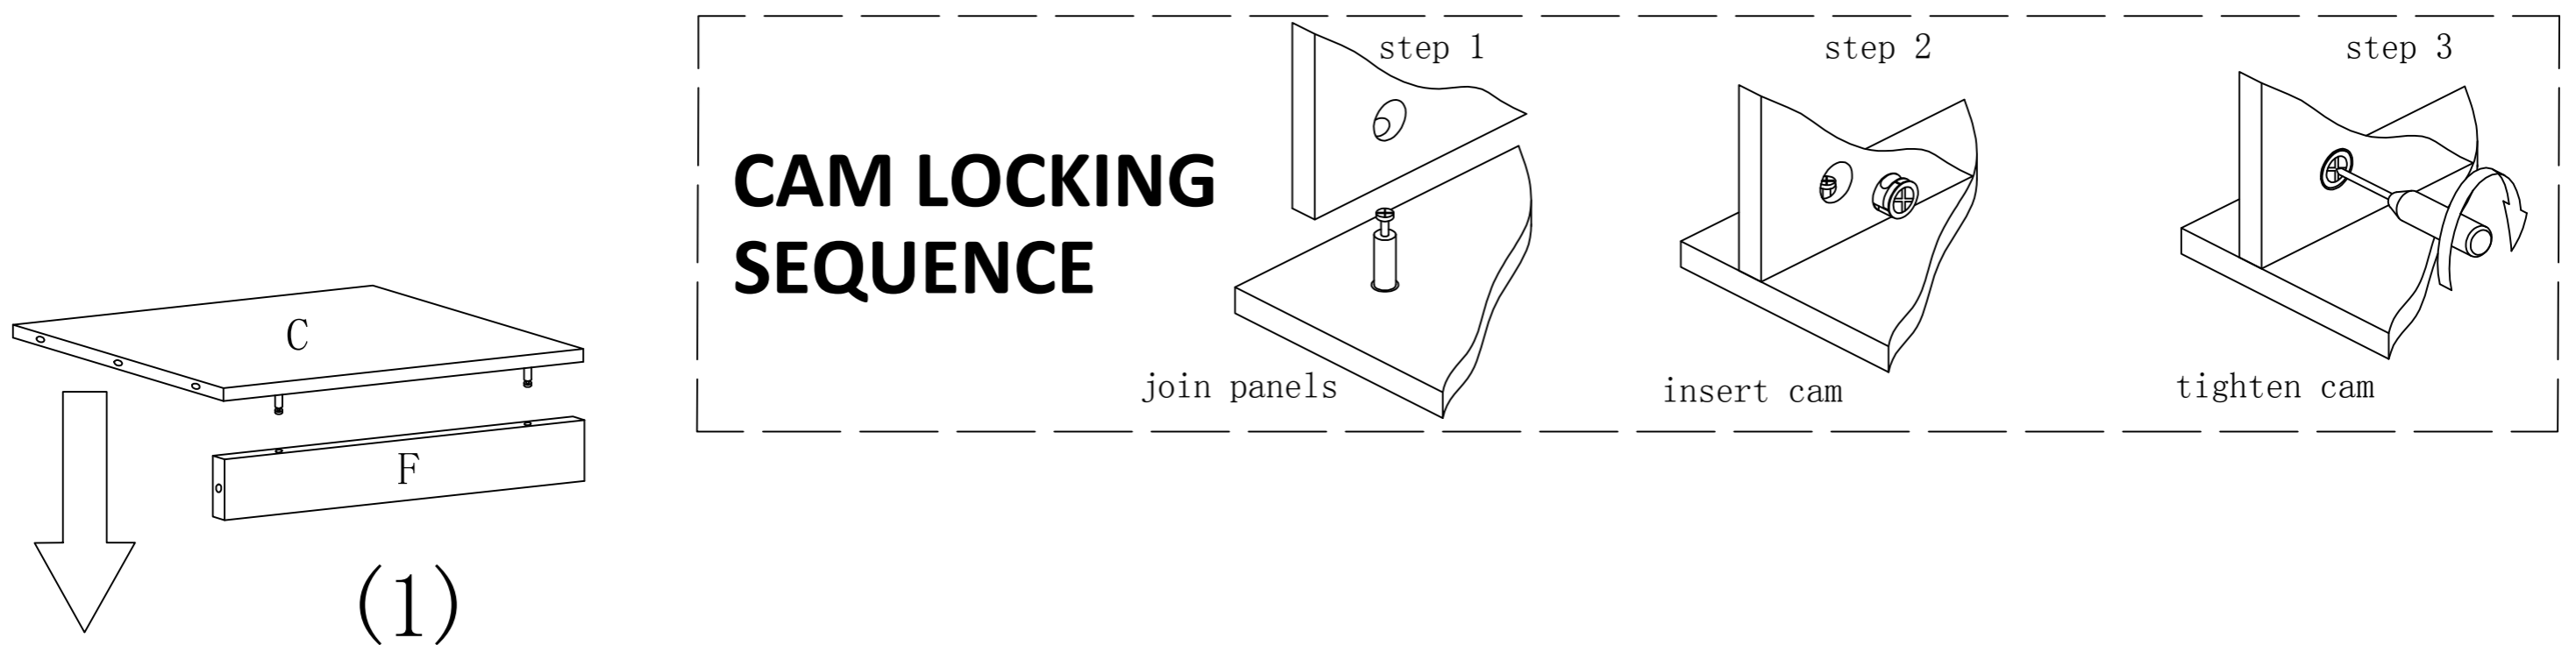


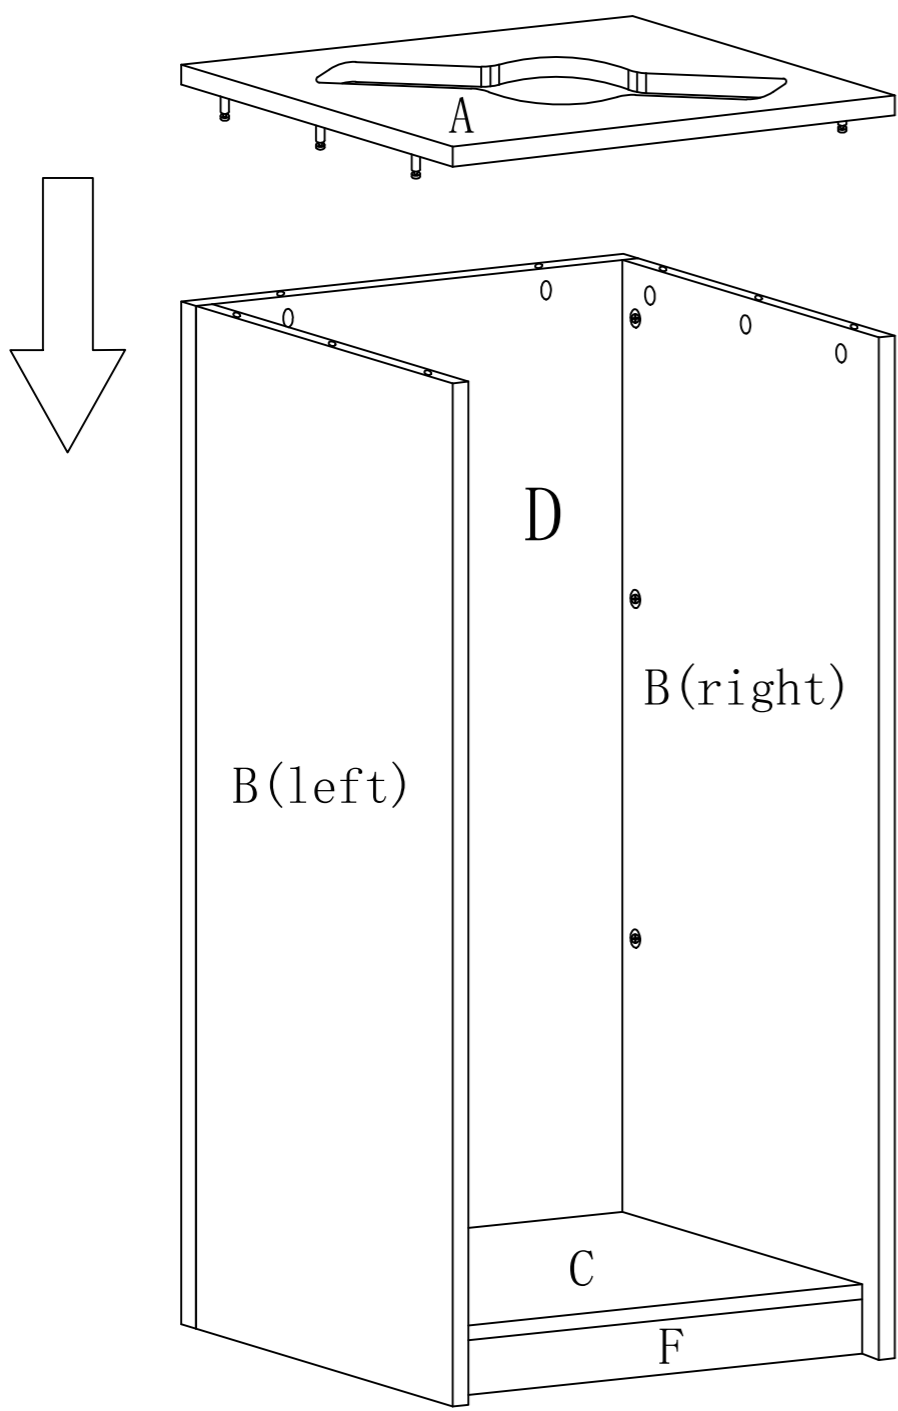



(4)

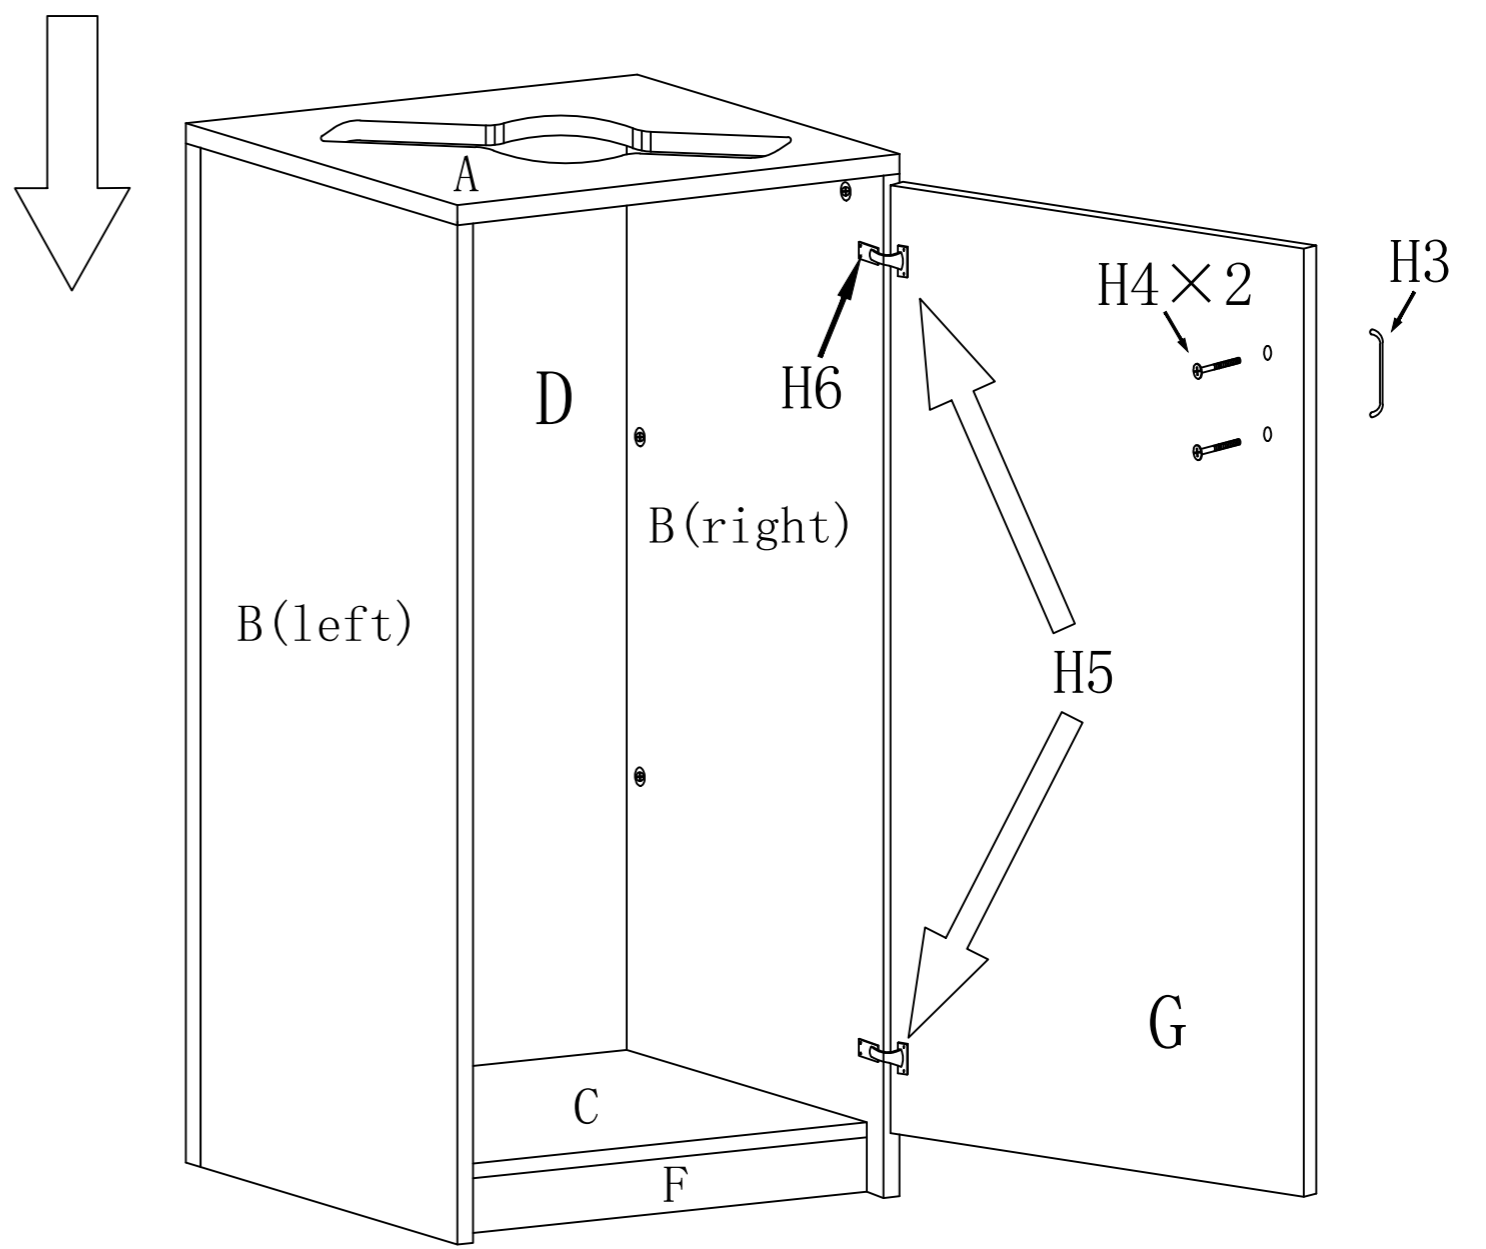



(5)

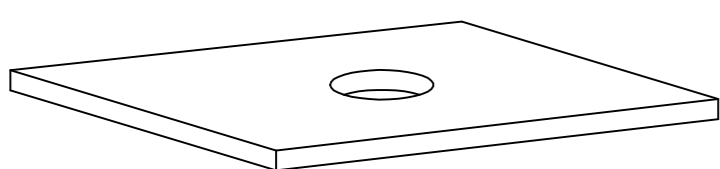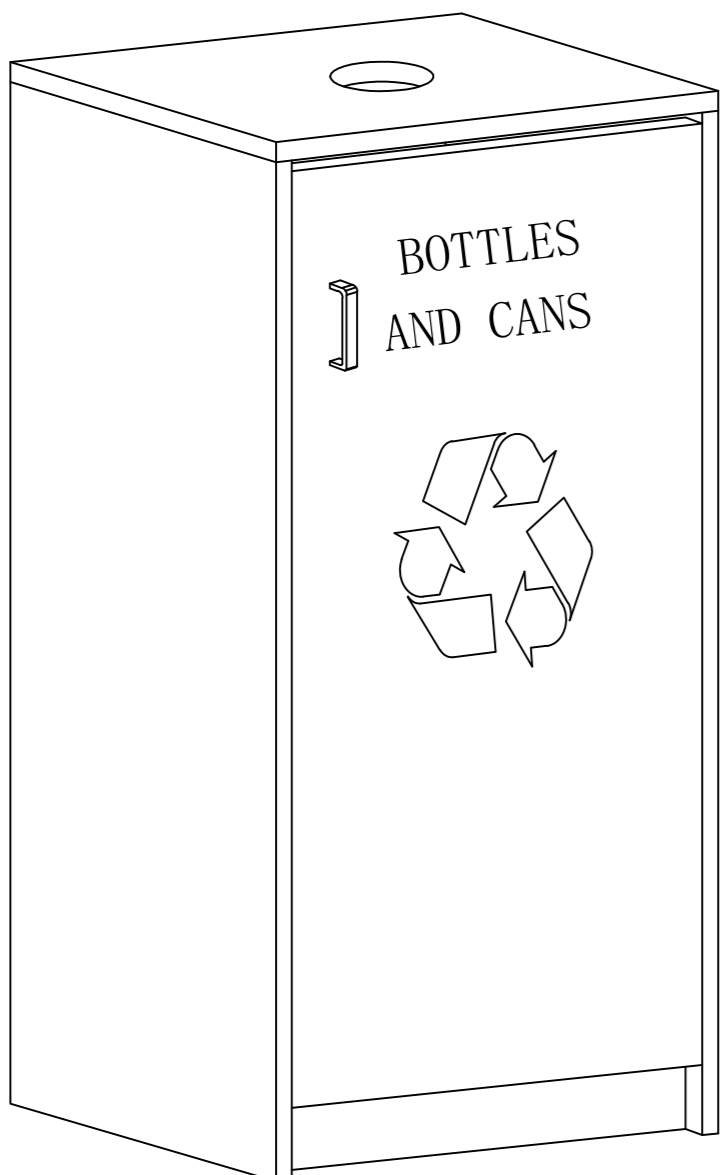

style 1

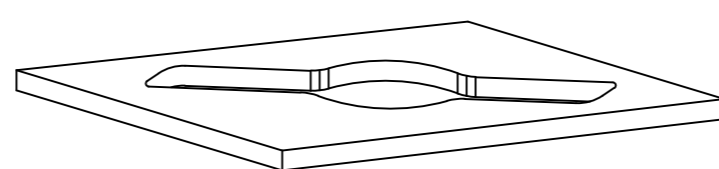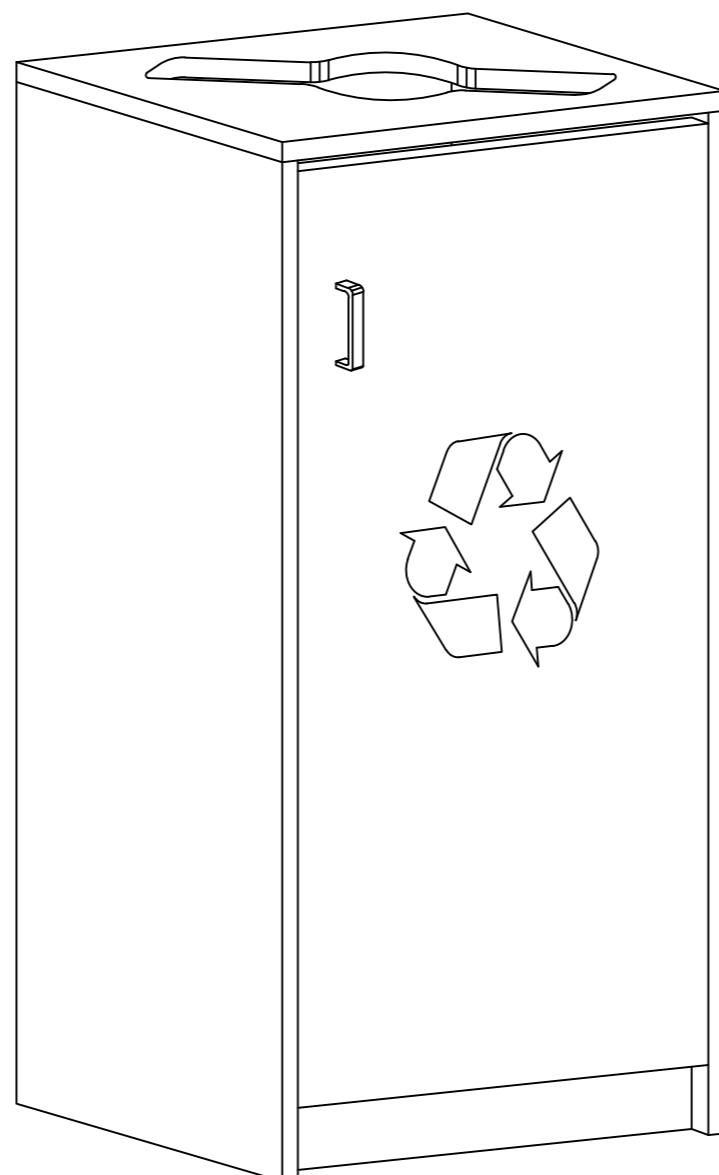

style 2

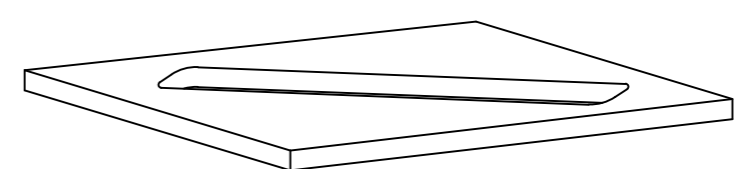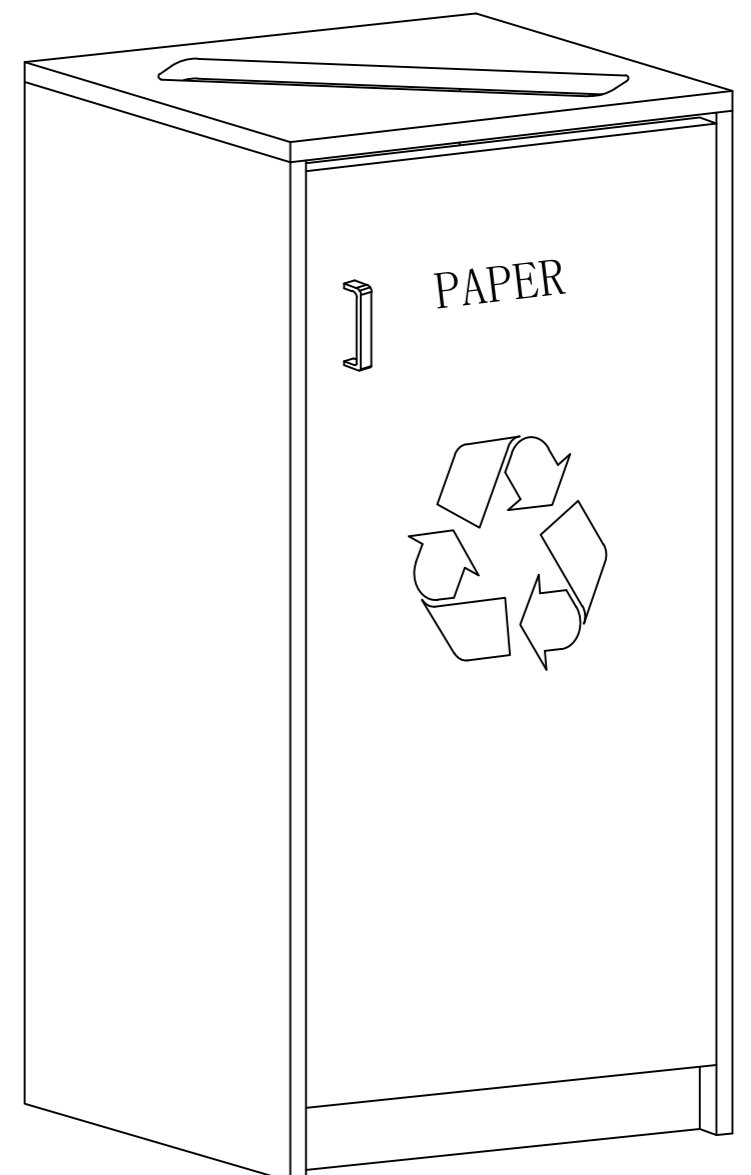

style 3