



MRCORNERBK Assembly Instructions




Step 1
Using a Phillips head screwdriver, screw in two bolts.

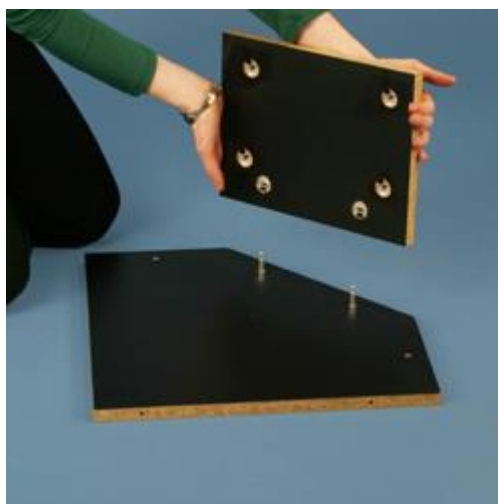

Step 2
Insert the angle paneled cams so that the openings face the same direction as the bolts.

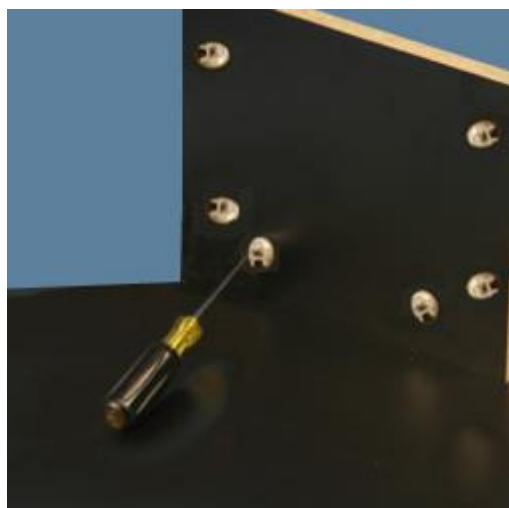

Step 3
Turn the cams clockwise to tighten and lock them into place.

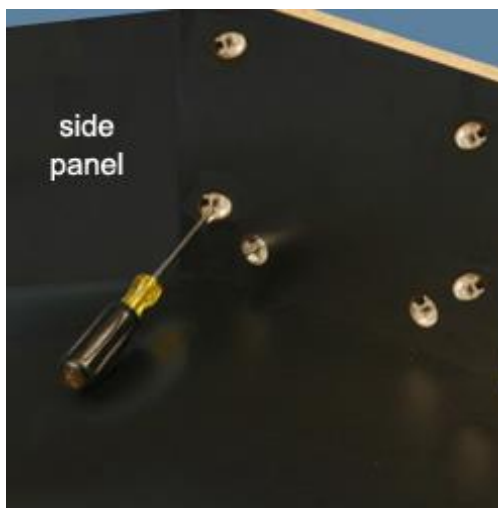

Step 4
Add 2 side panels. Attach each of the side panels with 2 cams. Turn cams clockwise to tighten.



Step 5
Find the narrower side panel.



Step 6
Attach side panel to base using 3 screws.



Step 7
Move the wider side panel into position.



Step 8
Attach side panel to base and other side panel using 6 screws. Position the shelves as needed.