




# SNAP FRAME

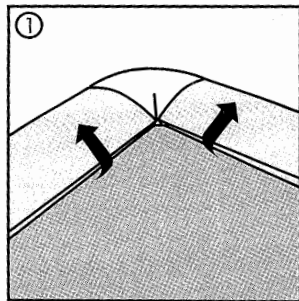


•Open all profiles upwards.

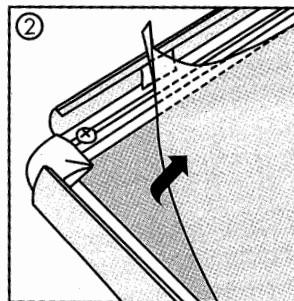

•Take-off the anti-reflex cover.

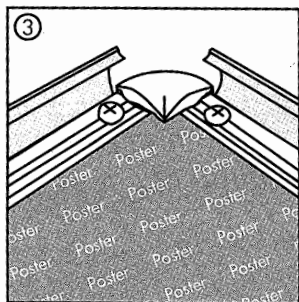

•Place in the poster.

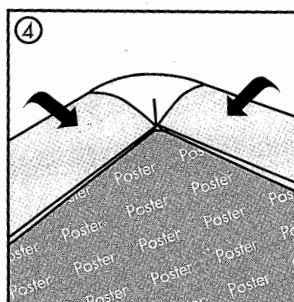

•After placing the cover back on the poster, close the profiles downwards.

## Customer Please Note:

Peel protective film from inside of anti-reflex cover prior to use.

