

# Assembly Instructions for RDRUMSM

**Before proceeding, be sure to have the following hardware:**

Drum

Base

 Male Post-screw [x2]

 Female Post-screw [x2]


 Nylon Washer [x4]

 Nylon Sleeve [x2]

 Stop-knob

Keys [x2]

Flat-head Screwdriver (**not included**)

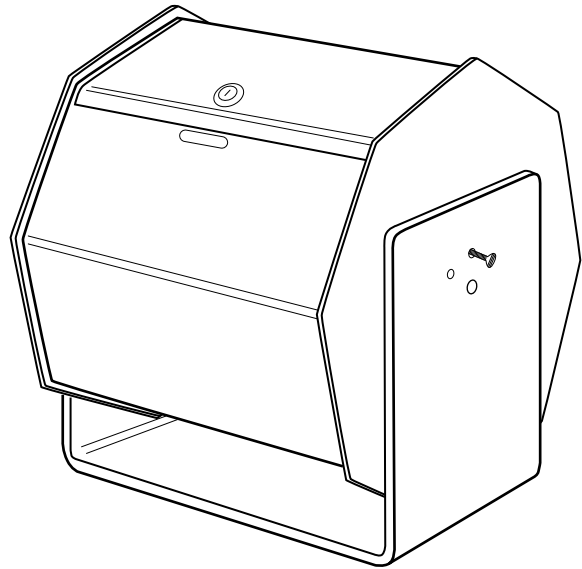

**1.** Insert the nylon sleeves into the large center hole on each side of the base.

**2.** Position drum into the base with the multi-holed side, aligned with the stop-knob side of the base. It is easiest to do this with the unit laying on its side.

**3.** Insert a female post-screw through a nylon washer and then through the center holes of the base and drum. Repeat on opposite side.

**4.** From inside the drum, insert the male post-screw through a washer and into the female post-screws. Tighten with a flat-head screwdriver. Repeat on opposite side.

