

ASSEMBLY INSTRUCTIONS

DISPLAYS2GO

1.




Acrylic Signage

2.



Standoff

3.

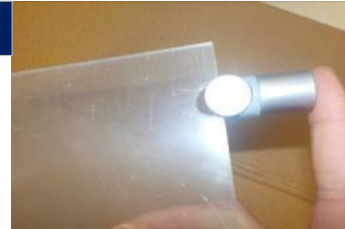

Place standoff into groove of acrylic signage

4.



Depicted is the correct attachment of standoff into acrylic signage

5.



Loosen up cap on standoff

6.



Place drywall screw provided into standoff

7.



Depicted above is the screw in the standoff fully

8.



Tighten the cap back on to the standoff

9.



Place plastic cap provided onto the screw the the ingroove of standoff facing down on barrel of standoff

10.



Depicted above is the correct way unit should look to this point

11.



Place unit on desired area with the anchors provided (make sure holes