

SR466, SR48511, SR264, SR264OV, or SR485OV

Printing and Mounting Instructions

1. Print templates for the film are available online at 2 locations :

- www.displays2go.com - On the Home Page, type SR466, SR48511, SR264, SR264OV, or SR485OV into the "enter sku" box to access.
- www.signstandoffs.com - On the Home Page, type SR466 into the "search" or "sku" box to access.


The templates are available for download in Word, Illustrator, and Photoshop formats.

(Note: The pre-diecut films are for use in color or B&W photocopiers and laser printers only.)


2. After opening the template and adding your custom information, we strongly recommend you print a test of your design on plain paper first. By placing the die-cut film over this test print you will be able to see if everything looks correct. This allows for fine tuning the design before printing onto the supplied film.

3. Print your finalized design onto the film using a color or B&W laser printer or photocopier. Select the correct media type and always print at 100%. Carefully separate the square from the sheet at the perforations. Fold each edge back and forth several times until the edges break apart. Do not rush this process.

4. Hold the aluminum sign holder at the desired location on the wall and make sure it's level. Pencil in the hole locations onto the wall (A). Drill pilot holes for the screws and if your wall is hollow insert the wall anchors.

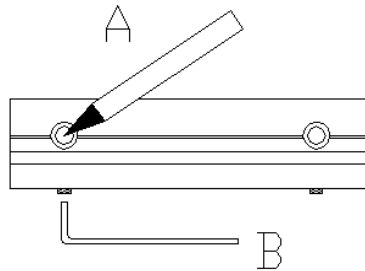

5. Using the included mounting screws, mount the aluminum sign holder to the wall.

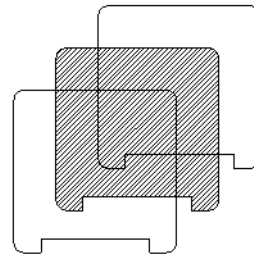

6. Sandwich your printed design between the two acrylic sheets.

7. Place the sign assembly into the aluminum sign holder and hand-tighten the Allen set screw on the bottom of the Aluminum sign Holder (B).