



ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

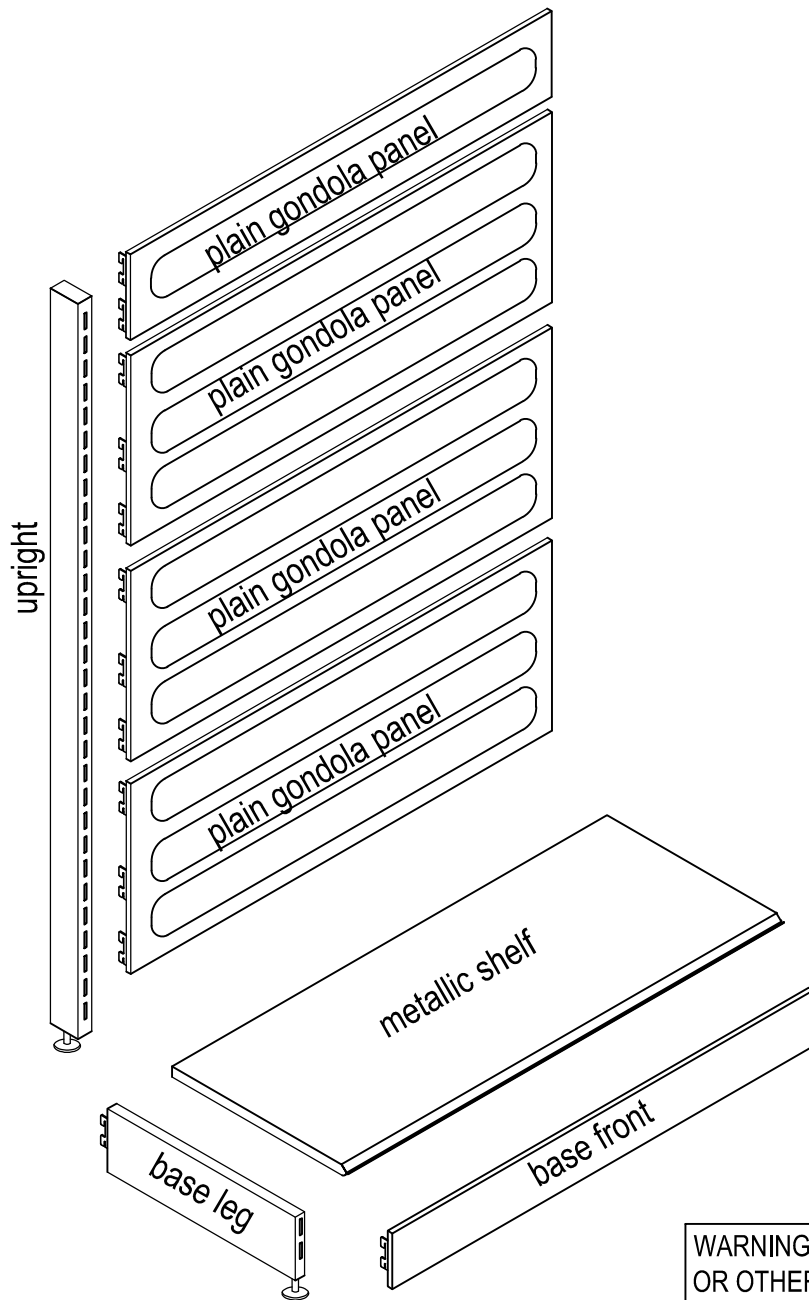

WARNING: PLEASE DO NOT USE HAMMER
OR OTHER METALLIC TOOLS DUE TO NOT
TO GIVE DAMAGE TO UNITS!


- SINGLE UPRIGHT - 1 PCS.
- METALLIC SHELF - 1 PCS.
- BASE FRONT-PLINTH 1 PCS.
- BASE LEG - 1 PCS.
- PLAIN GONDOLA PANEL- 3 PCS.
(PANELS MAY BE PLAIN OR PERFORATED)
- SHORT PLAIN GONDOLA PANEL - 1 PCS.

ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

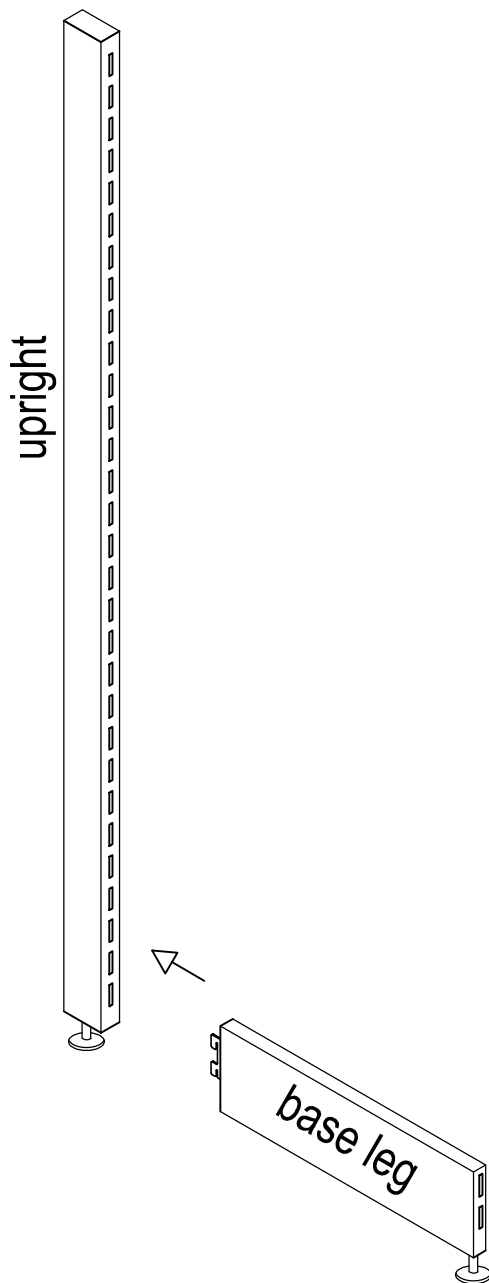


1- INSERT BASE LEG TO UPRIGHT

ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

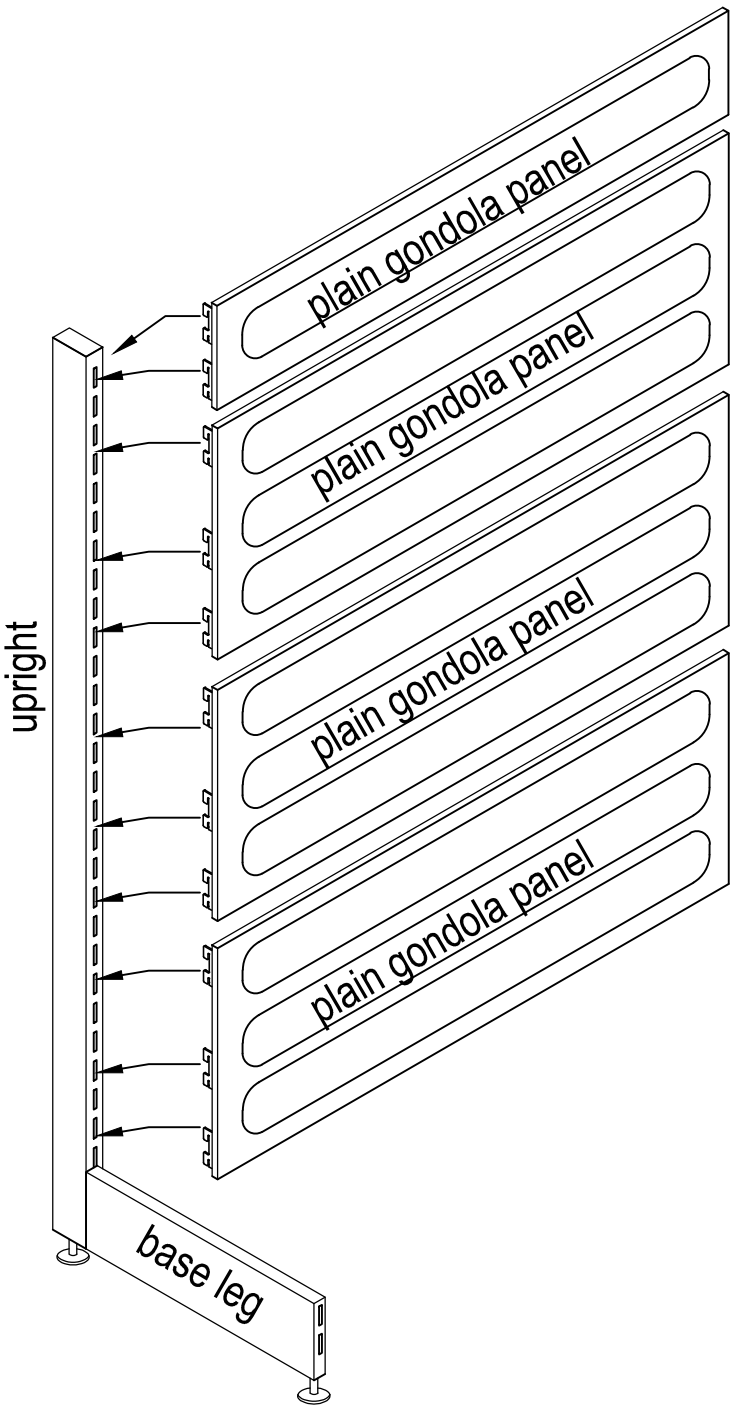


2- PUT ON BACK PANELS IN REGULAR TURN

ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

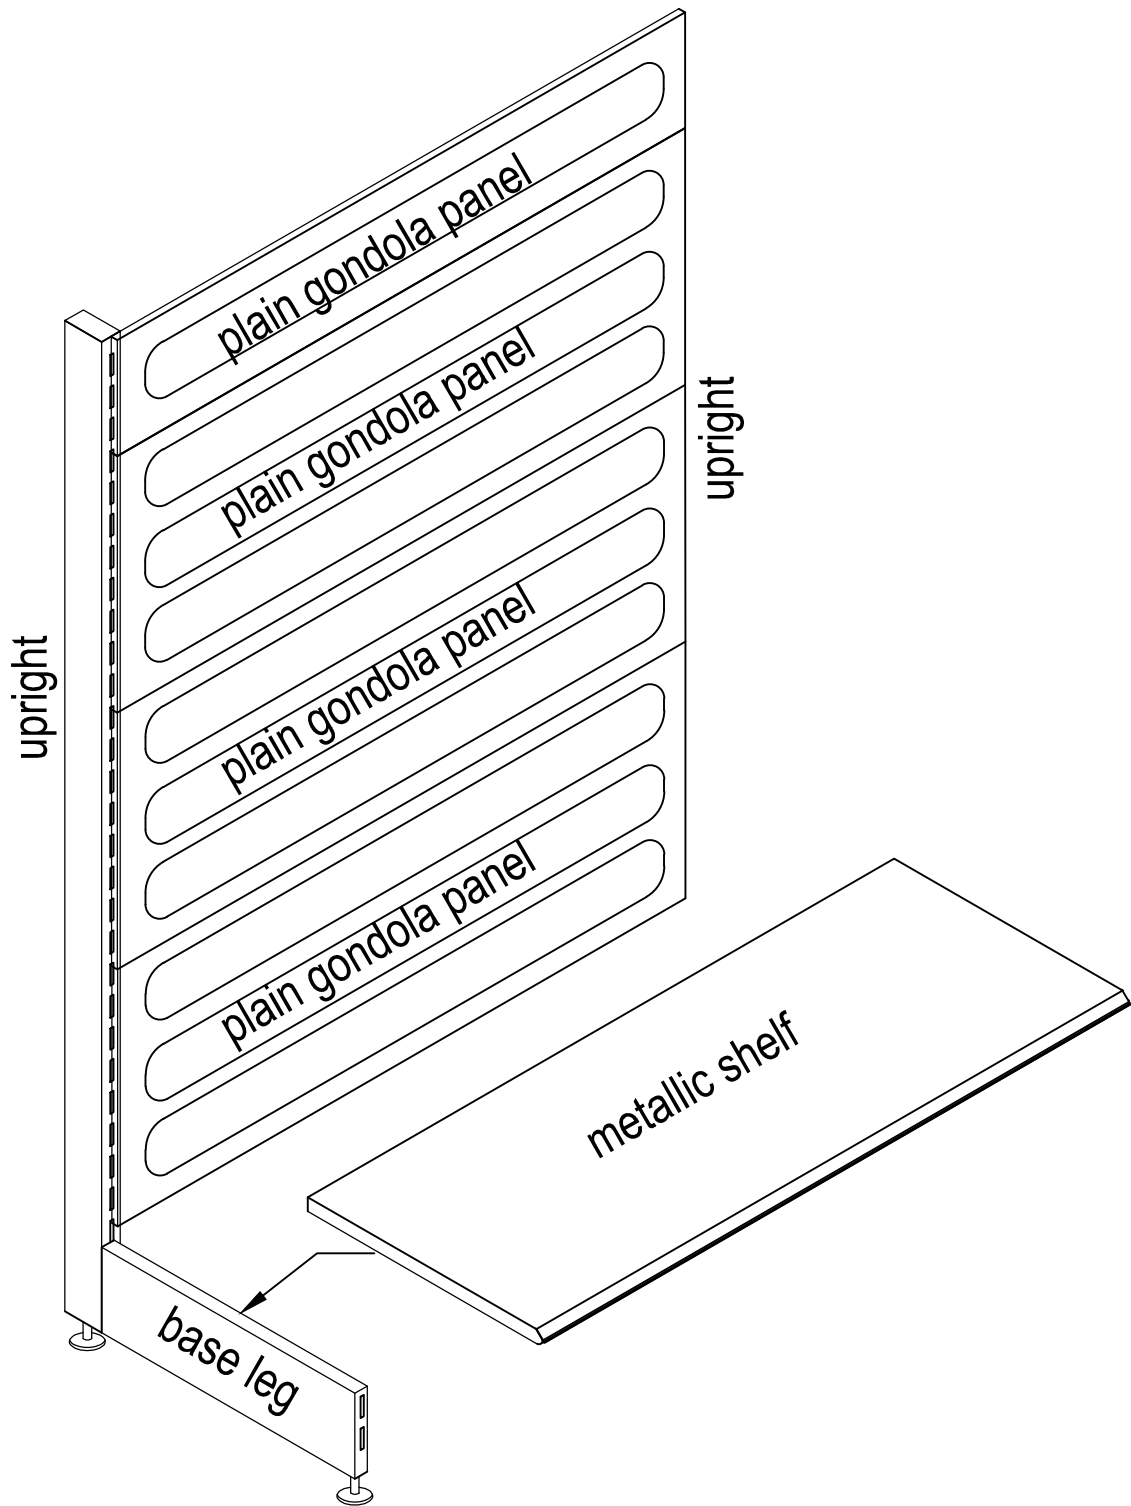


3- INSERT METALLIC SHELF TO BASE LEG

ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

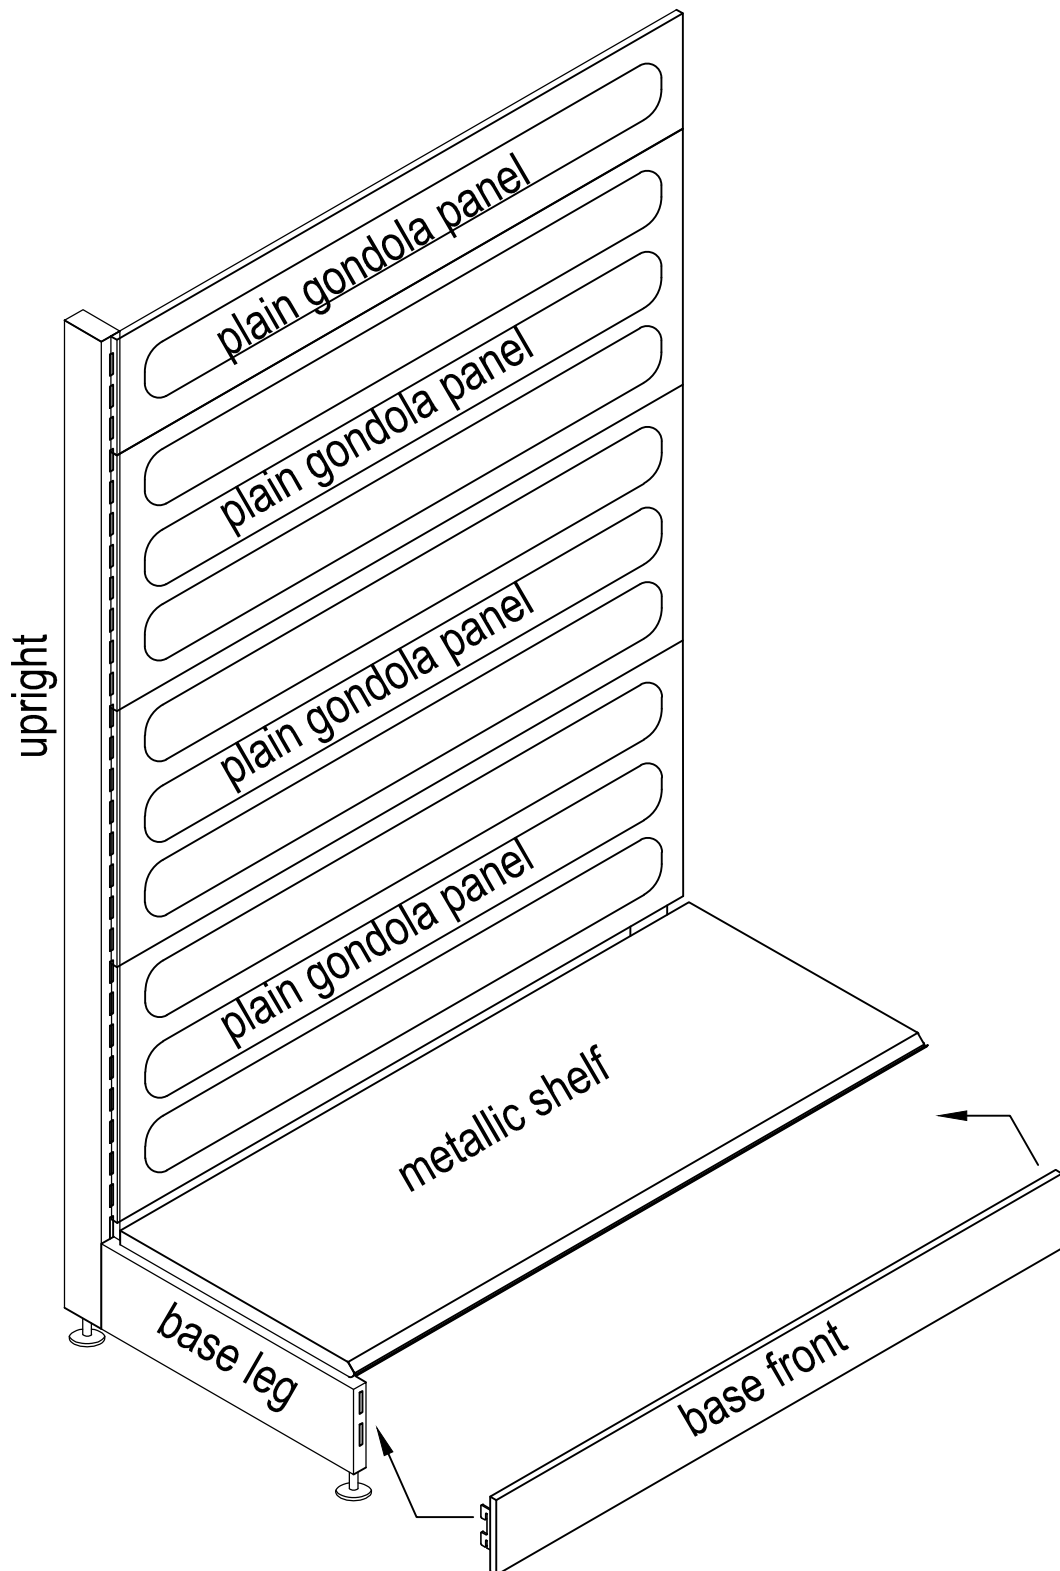


4- INSERT BASE FRONT TO BASE LEGS

ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

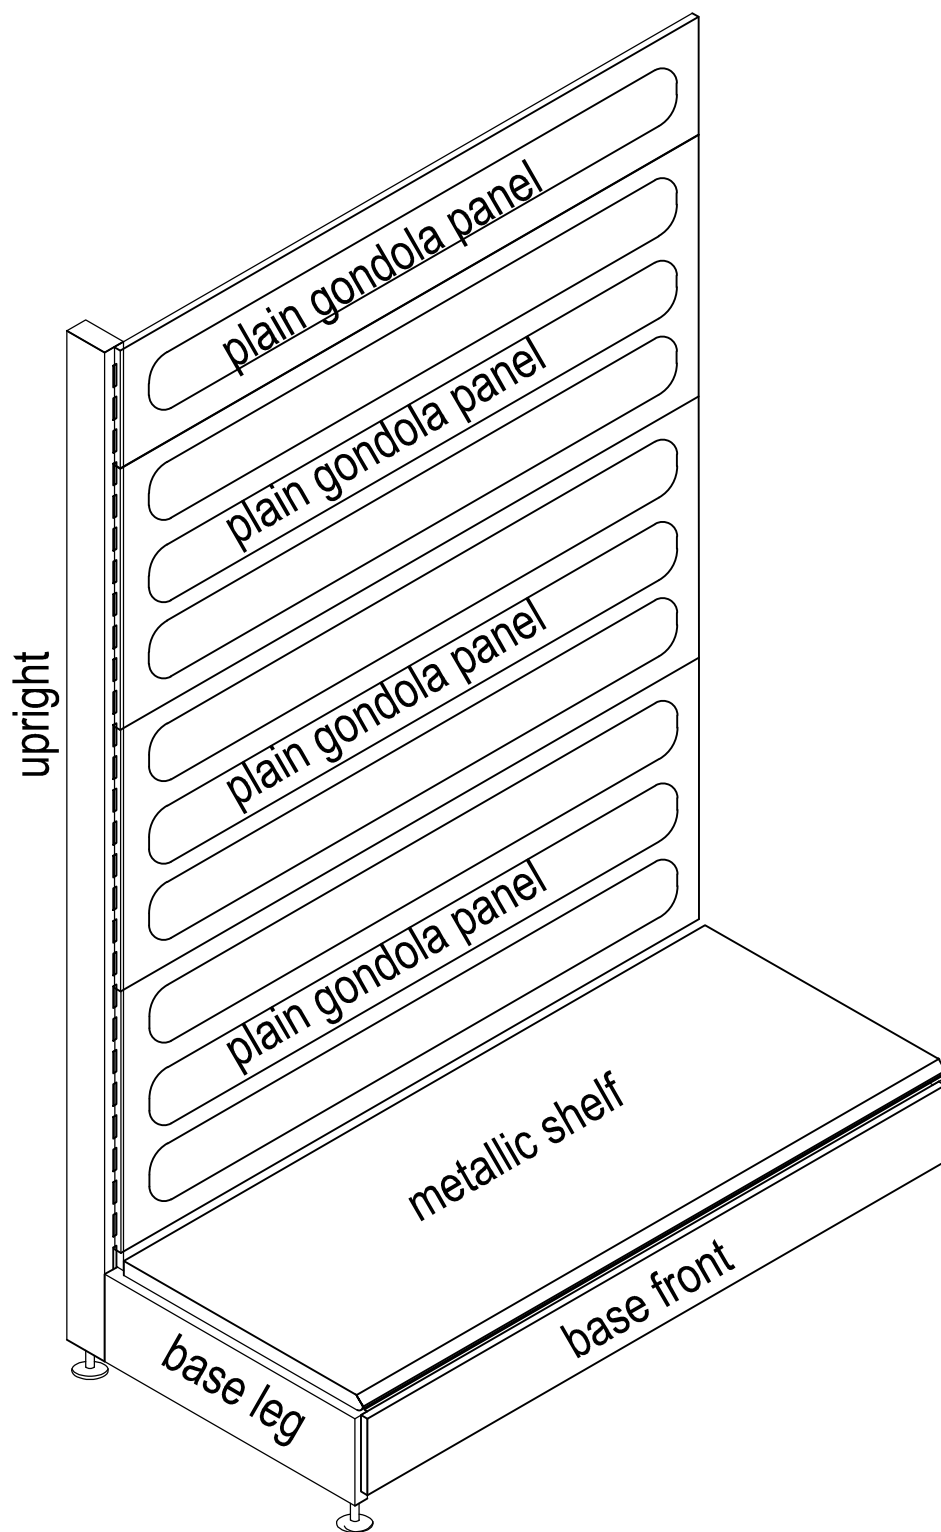

ASSEMBLY INSTRUCTIONS FOR THE WALL ADD-ON UNITS

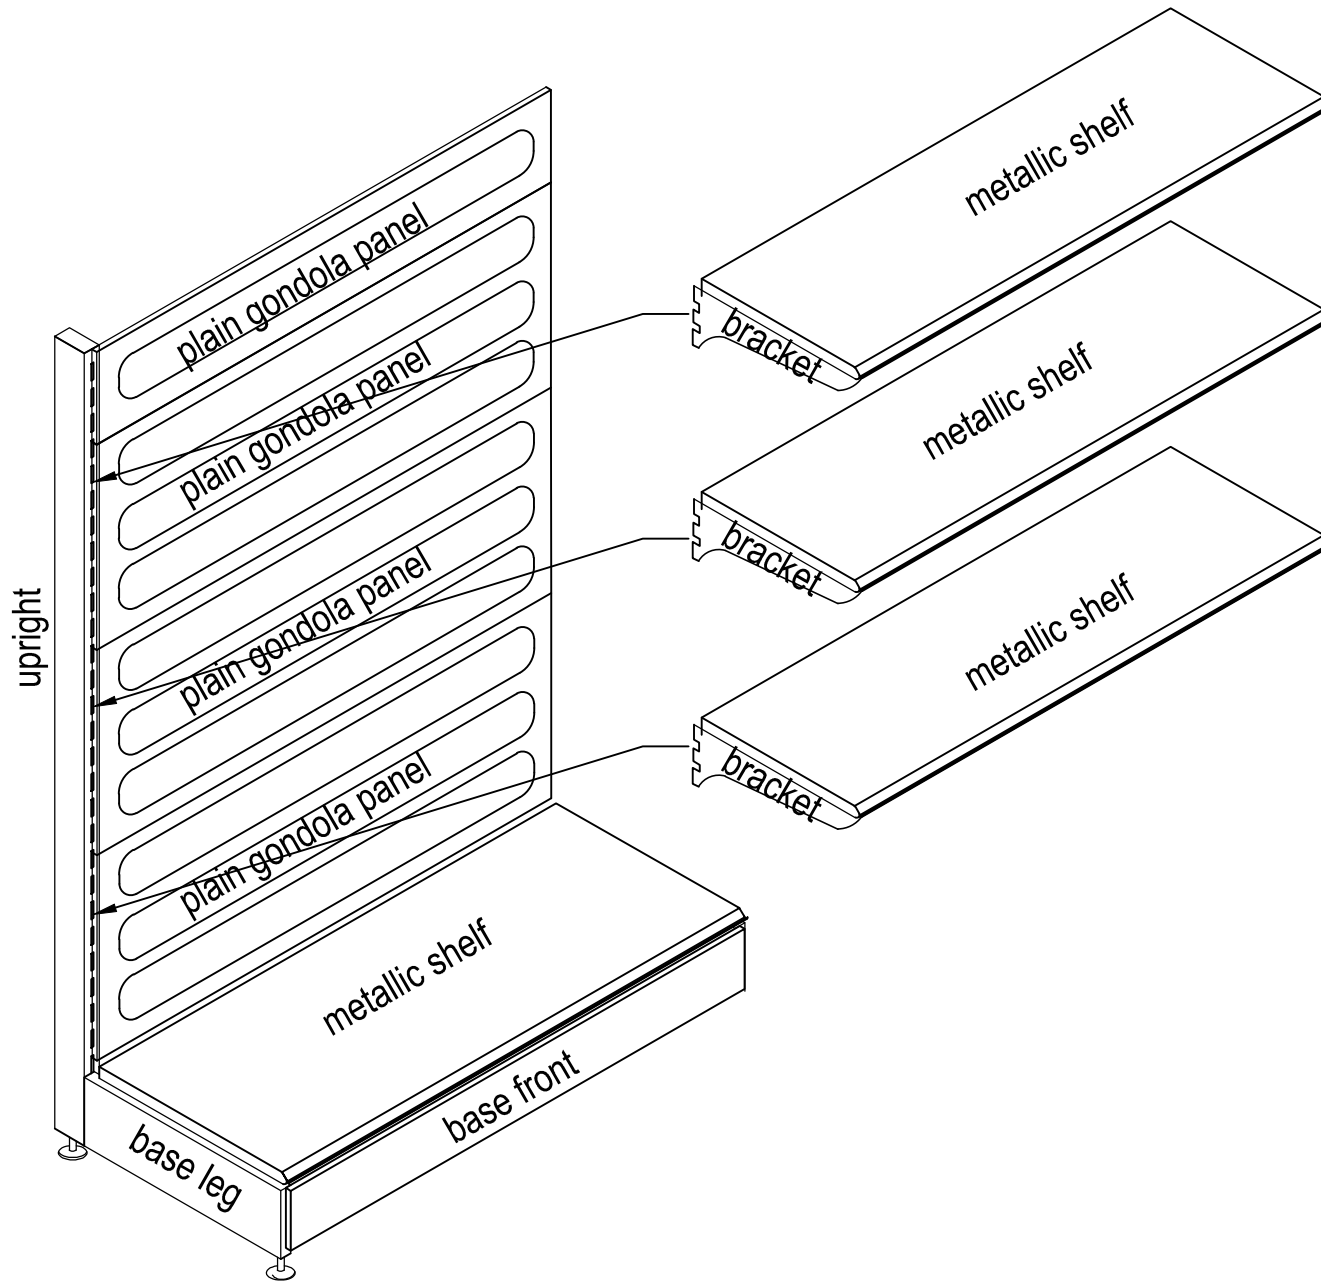

HOW TO ADD ON WALL UNIT TO THE STARTER WALL UNIT

