


WMSO Series Installation Instructions


1.




Separate each
standoff from
the base.



2.

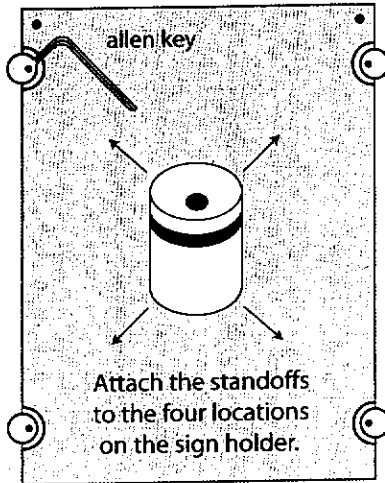

3.

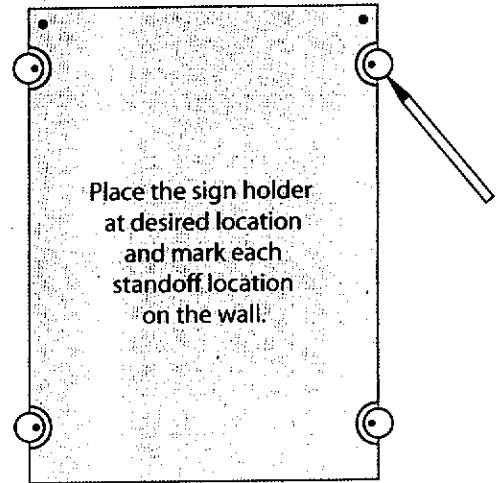


4.



Drill holes in the center
of each marked spot.
Insert wall anchors.

5.

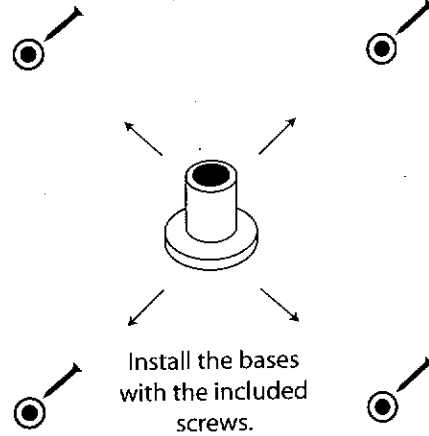

6.

