


WMSO Series Installation Instructions


1.




Separate each
standoff from
the base.




2.

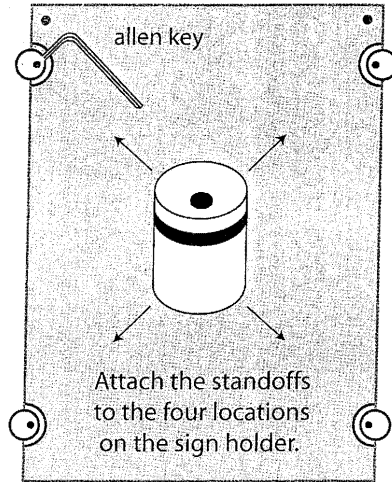

3.

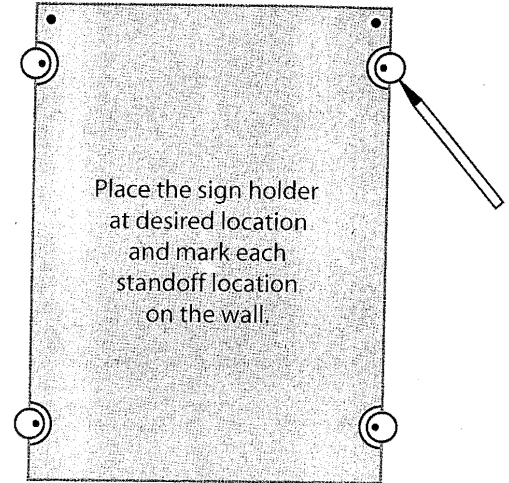


4.






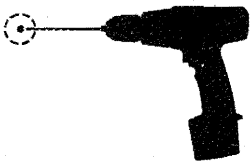


Drill holes in the center
of each marked spot.
Insert wall anchors.

5.

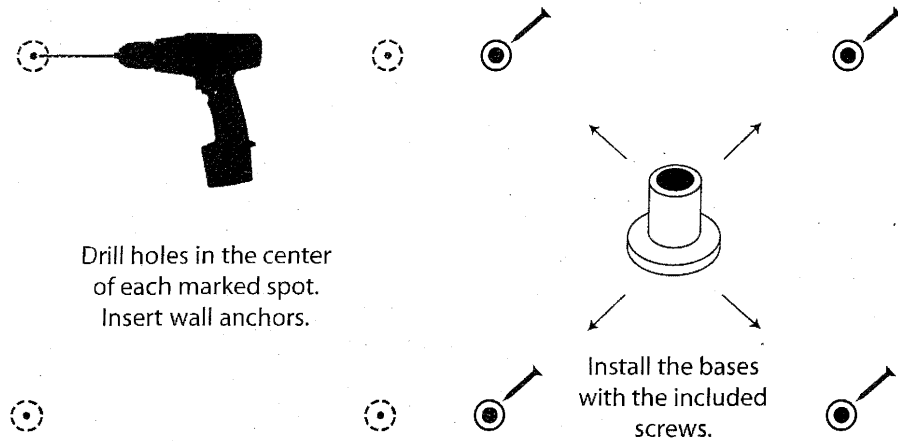

6.

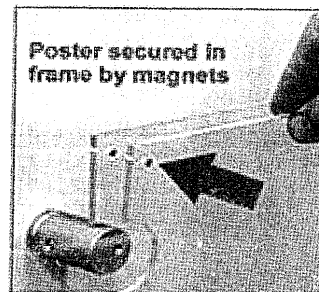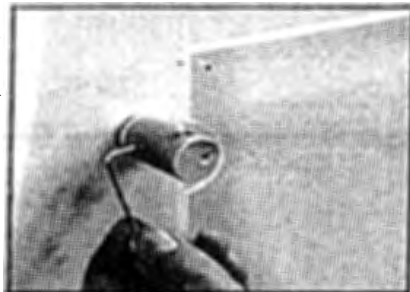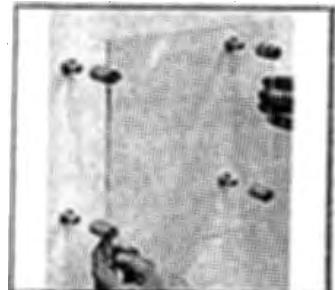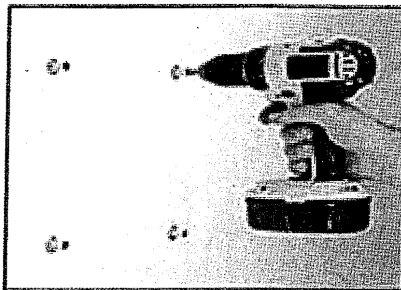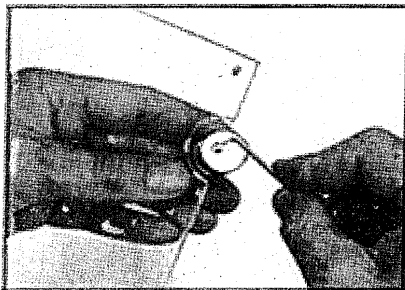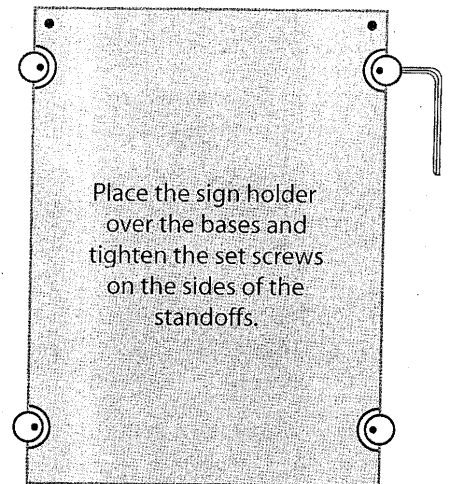

Poster secured in
frame by magnets