

# WMSWDFCWH

## Slatwall Cube Fixture

### Assembly Instructions

#### How to Assemble Fixture's Base



#### Tools Required:

- Rubber Mallet
- Phillips screw driver

#### Tools Included:

- Allen Wrench

#### Base Kit Hardware (C-J) listed to the right



#### Base Kit Contents:

- A. (1) Spinner Base Top (assembled)
- B. (4) Kick Base parts w/ pre-drilled holes

#### Base Kit Hardware shown in photo at left

- C. (12) Camlocks
- D. (12) Camlock Pins
- E. (16) Panhead Screws
- F. (4) Dowel Pins (4Way)
- (8) Dowel Pins (Cube)
- GI. (4) Casters
- H. (1) Assembly Instructions



#### Step 1 (Assemble the 4 kick base parts)

- Start by installing the Camlock pins into the pre-drilled holes with the Phillips screwdriver.
- Next, install the Camlocks by tapping them into position with the mallet.
- Match the kicks with the same lengths parallel to each other & lock them with the Camlocks.
- Tip - Tilt the Phillips screwdriver slightly upwards to lock the Camlocks.



### **Step 2 (Assemble the kick base to the spinner base)**

- Start by installing the CamLock pins into the pre-drilled holes of the spinner base.
- Set the kick base onto the spinner base and fasten together with the CamLocks.
- Tip - If you do not want to utilize the spinner base option, install a screw through the bottom of the base panel into the top panel (taking care not to puncture through the top panel). This will stabilize the spinner component of the base unit.



### **Step 3 (Install casters) the casters are provided / installation is optional**


- Install optional casters by positioning the castor into each of the 4 corners.
- Using the pan head screws, attach the casters through the pre-drilled holes on the inside corners of the kick base.
- • Tip - get all 4 screws started before doing the final tightening for easier alignments.



### **Step 4 (Install 4 wooden dowel pins into base top)**

- Install the 4 wooden dowel pins into the pre-drilled holes on the base top.
- The spinner base unit is now ready to install the display panels.

## How to Assemble Fixture's Side Panels

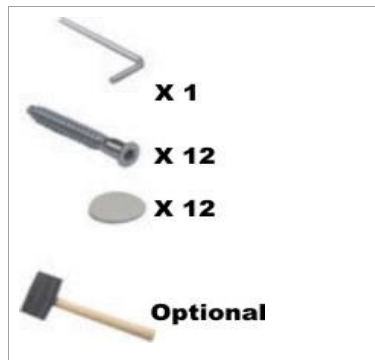

### Tools and Hardware Required (supplied with base kit hardware)

(1) Allen Wrench  
(16) Confirmat Screws  
(16) Screw Caps

### Tools - Optional

Rubber mallet



### Cube Package Contents

A. (2) Cube wings per box - 4 total for complete assembly  
B. (1) Assembly Instructions



### Step 1 (Assemble the Cube display panels onto base)

Make sure the 4 wooden dowel pins are inserted into the base top.  
\*Tip - the rubber mallet can be used to seat the wooden dowel pins fully.



### Step 2 (Assemble Cube display panels onto base)

Start by installing two panels together onto the dowel pins. Locate the holes on the bottoms of the panels and set them onto the pins. Attach the panels together with the confirmat screws. **\*Note: It is helpful to use two people at this step.**

Once the first two panels are together, you can install the remaining panels to complete the unit.

\*Tip - Do not fully tighten all the screws until all the panels are in place. Once all the wing panels are together and in place, final tighten the screws.



### Step 3 (Adhere the decorative screw caps to cover the screw heads)

Peel the decorative screw caps to expose the sticky back, and carefully center and cover the screw heads.